

Messager MP3 by Nel-Tech Labs, Inc.

Installation & User Manual

### **Index:**

Introduction	3
Messager MP3 Layout Summary	4
Installation	5
Message Programming & Operation.	6
Warranty & FCC	7

## **Introduction:**

The Messager MP3 is a solid-state digital messaging system that can be utilized to create productions that require a continuous message playback. Messages are stored on removable flash memory cards called Message Mates. Message programming is simple, just plug the Messager MP3 into an available USB port on your computer, and you instantly have the ability to drag 'n' drop MP3 files onto the Message Mate flash memory.

# **Unpacking and Inspection:**

Before you begin installation, unpack and verify you have all the correct parts.

- (1) Messager MP3
- (1) Message Mate cartridge
- (1) 12VDC @ 500mA power supply
- (1) Instruction manual
- (1) RCA to RCA cable
- (1) USB cable
- (1) 1/8" Adapter
- (2) Wall mount screws
- (4) Rubber feet

If you are missing any of these parts STOP and call your dealer.

# **Important Notes:**


The Messager MP3 will not play audio when its USB port is connected to a computer.

Computer connection via USB port is only necessary to program Message Mate cartridges.

Computer must be running a minimum of Windows XP Home or Professional with Service Pack 1 or later.

## **Messager MP3 Layout Summary:**


#### Front of Unit

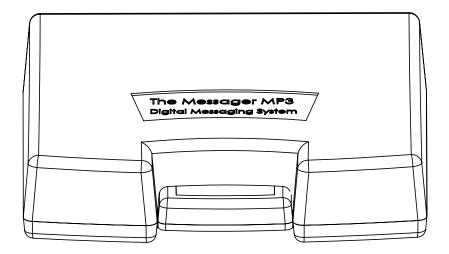

MESSAGE MATE SLOT - The slot on the front of the Messager MP3 accepts a proprietary flash memory cartridge which stores all of the MP3 files.

STATUS - The STATUS LED indicator is located on the front right side of the units printed circuit board. During playback this LED will be SOLID BLUE. If there is a problem with the cartridge, it is not inserted correctly or if it is empty, the LED will BLINK BLUE.

#### Rear of Unit

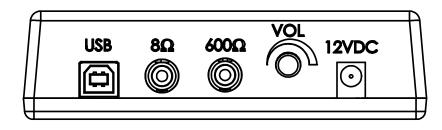

USB JACK - This jack is used to connect the Messager MP3 to a computer via the USB cable supplied.

Note: The Messager USB will not play audio while connected to a computer.

 $8\Omega$  and  $600\Omega$  OUTPUT - This jack connects to the INPUT of the phone systems MOH port or PA system. Depending upon the systems impedance use either the  $8\Omega$  or  $600\Omega$  jack - DO NOT USE BOTH!


VOLUME - This pot is used to control the  $8\Omega$  and  $600\Omega$  output level of the stored messages. Volume up is clockwise, volume down is counter-clockwise.

12VDC - This is where the supplied 12VDC @ 500mA power pack is connected.

## **Installation:**

The Messager MP3 should be installed using the following steps outlined below:

- Step 1: Wall or shelf mount the unit. Screws and rubber feet are supplied in the accessory kit.
- Step 2: If connecting to an amplifier make sure it is turned OFF for this part of the installation.
- Step 3: Connect a RCA cable (supplied in the accessory kit) to the OUTPUT jack on the rear of the unit. Depending upon the required impedance use either the  $8\Omega$  or  $600\Omega$  output RCA jack. Connect the other side to the MOH port on the phone system, PA system or speaker.
- **Step 4:** Insert the Message Mate cartridge. If insertion of the cartridge is difficult, turn it over and try reinserting. The cartridge should slide into the slot smoothly. See Message Programming & Operation section if cartridge is blank.
- **Step 5:** Attach the included power pack to a wall or power strip receptacle, then attach the other end to the jack on the rear of the unit labeled 12VDC.
- Step 6: If any amplifiers were turned OFF during installation then turn then back ON now.
- **Step 7:** Adjust the volume level pot labeled VOLUME on the rear of the unit. Depending upon the application either call into the phone system and be placed on hold OR listen to the PA systems speakers to fine tune volume. Volume up is clockwise, volume down is counter-clockwise.

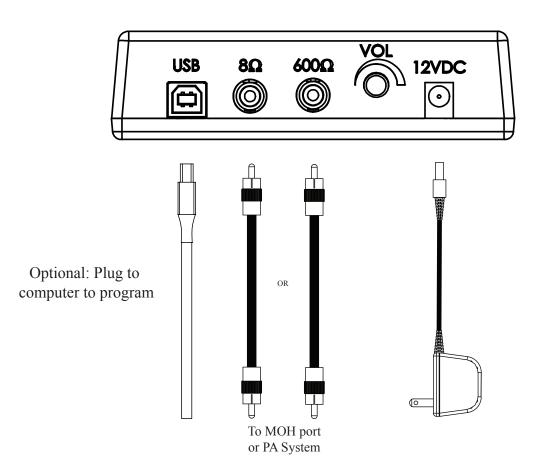

Wiring Diagram

## **Messager MP3 Operation:**

The Messager MP3 has an on-board LED status indicator. When a Message Mate cartridge is inserted in the Messager MP3 the LED will turn SOLID BLUE. When a Message Mate cartridge is not present, does not have audio programmed onto it or is in programming mode then the LED will FLASH BLUE.

Volume can be adjusted by the knob labeled VOLUME on the rear of the unit. Clockwise will increase the volume, counter-clockwise will decrease the volume. If you have poor quality (such as muffled or clipping audio) it may be connected to the wrong output; try switching from  $8\Omega$  to  $600\Omega$  or vice-versa until the desired volume and clarity is achieved.

When changing the Message Mate cartridge, power should be removed from the unit. Changing the Message Mate while power is on may result in damage to the cartridge or the playback unit.

The Message Mate cartridge supplied has been pre-loaded with audio. Continue to the next section <u>ONLY</u> if you need to ADD or REMOVE audio from the card.

## **Messager MP3 Programming:**

- **Step 1:** Place the Messager MP3 with the pre-inserted Message Mate cartridge, next to a computer running a minimum of Windows XP Service Pack 1.
- Step 2: (optional): Connect the included RCA cable to the  $8\Omega$  or  $600\Omega$  output of the Messager MP3. Connect the other side of the RCA cable to a speaker or receiver for testing the audio. We have included an optional 1/8" adapter for use on some inputs.
- *Step 3:* Plug the included power pack into a standard wall outlet. Plug the other end into the connector marked 12VDC on the rear of the Messager MP3.
- *Step 4:* Plug the included USB Cable into the back of the Messager MP3. Plug the other end into an available USB port on the computer. Windows should recognize the device.
- Step 5: Locate the .MP3 files you wish to add to the Message Mate cartridge. (Mono files insure the best playback.)
- **Step 6:** Drag 'n' drop the file(s) to the Message Mate cartridge (which is normally displayed in Windows as "Removable Disk").
- *Step 7:* Remove the USB cable from the Messager MP3, then listen to the production to ensure it is of acceptable quality.

#### Notes:

If you need to remove any audio simply select the audio file and hit delete on your keyboard.

The Messager MP3 will play audio in the order that is was placed on the Message Mate cartridge.

If the Message Mate cartridge needs to be reformatted use FAT, do not use FAT32.

# **Limited Warranty**

**TERMS:** Nel-Tech Labs warrants to the original purchaser ("Buyer") that the Product sold is free from defects in material and workmanship at the time of purchase. The warranty period begins at the time of Product's original purchase by the first end-user. The warranty applies for five (5) year from the original date of purchase, or as long as the product is owned by the original purchaser, whichever comes first. Included in the warranty are parts and labor. Buyer must provide written notice to Nel-Tech Labs of any defective part or conditions within the warranty period. If the defect is not the result of improper use, service, maintenance or installation, and if the equipment has not been otherwise damaged or modified after shipment, Nel-Tech Labs or its authorized representative shall either replace or repair the defective Product at Nel-Tech Labs's option. No credit shall be allowed for work performed by Buyer or unauthorized parties. Out-of-warranty repairs are invoiced at the current Nel-Tech Labs hourly rate plus the cost of parts, shipping and handling. In the event that the product serial number is missing or has been tampered with in any way, the foregoing warranty is void and without effect and Nel-Tech Labs shall have no liability whatsoever on account of defects to such product.

**LIMITATIONS:** Except as stated above, there are no warranties, express or implied, that extend beyond the specifications for the product. Nel-Tech Labs expressly disclaims any warranty, express or implied, that equipment sold hereunder is of merchantable quality or that it can be used, or is fit for any particular purpose. Buyer purchases and accepts equipment solely on the basis of the warranty here in above expressed. Under no circumstances shall Nel-Tech Labs be liable by virtue of this warranty or otherwise for any special indirect, secondary or consequential damages to any person or property arising out of the use or inability to use the product.

**REPAIRING OR REPLACING PRODUCT:** Buyer may obtain the repair or replacement of any eligible part or equipment covered under this warranty through a Nel-Tech Labs dealer only. Buyer is responsible for all shipping and handling charges in connection with the performance of this warranty. Products returned to Nel-Tech Labs must be securely packaged to prevent damage in transit, freight prepaid, and insured for replacement value. A return authorization number assigned by Nel-Tech Labs must be clearly marked on the outside of the shipping container. Proof of purchase must accompany shipment. Items delivered to Nel-Tech Labs without a return authorization clearly marked on the outside of the shipping container, and/or without proof of purchase is refused.

**CONTACT:** Please contact Nel-Tech Labs at the address and phone number below to receive a return authorization number and to arrange for the repair or replacement of a flawed part covered by this warranty. Please indicate the Product's serial number in all correspondence or a RMA authorization number in the absence of a serial number. Nel-Tech Labs, 4 Ash Street Extension, Derry, NH 03038, Phone: 1.603.425.1096.

**COPYRIGHT NOTICE:** The Nel-Tech Labs, Inc. Messager MP3 is strictly used for Licensed Music only. Use of copyrighted music is illegal and Nel-Tech Labs, Inc. takes no responsibility for that action.

FCC Part 15: This equipment has been tested and found to comply within the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct interference at his own expense. In order to maintain compliance with FCC regulations shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio & television reception.

Changes or modifications not expressly approved by Nel-Tech Labs could void the users' authority to operate the equipment.

IC ES 003: This Class A digital apparatus complies with Canadian ICES-003 C et appareil numérique de la classe A est conform e à la norme NMB-003 du Canada.

**CE CONFORMITY**: The Nel-Tech Labs Messager MP3 conforms with the following standards, in accordance with the EU Safety, EMC Emissions, & EMC Immunities: EN 60950-1:2001, EN 55022:1998 for Class A, EN 55024:1998 + A1:2001 + A2:2003, EN 61000-4-2:1995 + A1:1998, EN 61000-4-3:1995, EN 61000-4-4:1995, EN 61000-4-5:1995, EN 61000-4-6:1996, EN 61000-5-11:1994.







Nel-Tech Labs, Inc. 4 Ash Street Extension Derry, NH 03038

1.800.344.4685 www.nel-techlabs.com

Rev. A - 07/08