

Panasonic®

5.8 GHz Expandable Cordless Phone System



Model shown is KX-TG6500.

Operating Instructions

Model No. **KX-TG6500**
KX-TG6502

Pulse-or-tone dialing capability



The unit is Caller ID compatible. To display the caller's name and phone number, you must subscribe to Caller ID service.

PLEASE READ BEFORE USE AND SAVE.

Charge the battery for 6 hours before initial use.

Panasonic World Wide Web address: <http://www.panasonic.com>
for customers in the USA or Puerto Rico

Thank you for purchasing your new Panasonic cordless telephone.

Please read the IMPORTANT SAFETY INSTRUCTIONS on page 99 before use. Read and understand all instructions.

Caller ID and Call Waiting Service, where available, are telephone company services. After subscribing to Caller ID this phone will display a caller's name and phone number. Call Waiting Caller ID, which displays a second caller's name and phone number while the user is on another call, requires a subscription to both Caller ID and Call Waiting with Caller ID services (CWID).

Attach your purchase receipt here.

Copyright:



This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2004 Panasonic Communications Co., Ltd. All Rights Reserved.

Accessories (included)

For extra orders, call 1-800-332-5368.

For hearing or speech impaired TTY users, call 1-866-605-1277.

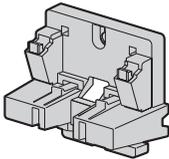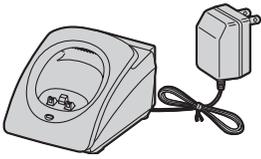
<p><input type="checkbox"/> AC Adaptor (p. 12) Order No. PQLV1Z (PQLV1)</p>  <p>1</p>	<p><input type="checkbox"/> 4-Wire Telephone Line Cord with Green Plugs (p. 13, 14) Order No. PQJA10088Z</p>  <p>1</p>	<p><input type="checkbox"/> 2-Wire Telephone Line Cord with Transparent Plugs (p. 14) Order No. PQJA10075Z</p>  <p>1</p>
<p><input type="checkbox"/> Handset Cover (p. 16) Order No. PQYNTG6500BR</p>  <p>KX-TG6500: 1 KX-TG6502: 2</p>	<p><input type="checkbox"/> Battery (p. 16) Order No. HHR-P104</p>  <p>KX-TG6500: 1 KX-TG6502: 2</p>	<p><input type="checkbox"/> Belt Clip (p. 87) Order No. PQKE10377Z5</p>  <p>KX-TG6500: 1 KX-TG6502: 2</p>
<p><input type="checkbox"/> Wall Mounting Adaptor (p. 84) Order No. PQKL10063Z3</p>  <p>1</p>	<p><input type="checkbox"/> Charger Unit (p. 12) (KX-TG6502 only) Order No. PQLV30024ZB AC Adaptor Order No. KX-TCA1-G (KX-TCA1)</p>  <p>KX-TG6502: 1 Charger Unit</p>	

Expanding Your Phone

For KX-TG6500 users

KX-TG6500 includes 1 handset and 1 base unit. You can expand the system by adding up to 3 accessory handsets, sold separately.

A maximum of 4 handsets can be registered to the base unit.

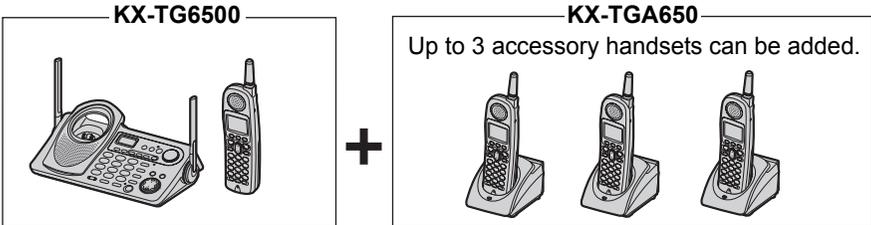


- The included handset is pre-registered at the factory and assigned an extension number 1.

For KX-TG6502 users

KX-TG6502 includes 2 handsets, 1 charger unit and 1 base unit. You can expand the system by adding up to 2 accessory handsets, sold separately.

A maximum of 4 handsets can be registered to the base unit.

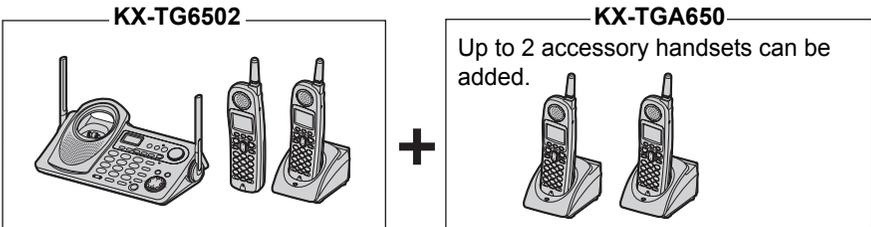

- The included handsets are pre-registered at the factory and assigned extension numbers 1 and 2.

The model number of the accessory handset is KX-TGA650.

A charger unit is included with each accessory handset.

To order accessory handsets, contact your dealer or call 1-800-211-PANA(7262) to locate a dealer.

After purchasing accessory handsets, you must register each to the base unit. (Please read the accessory handset's Installation Manual.)

Contents

Preparation

For Best Performance 6

Location of Controls 7

Displays 10

Installation 12

Connecting the AC Adaptor . . 12

Connecting the Telephone

Line Cord 13

Installing the Battery in

the Handset 16

Battery Charge 16

Programmable Settings 18

Programming Guidelines 18

Function Menu Table 19

Date and Time 20

Display Language 21

Dialing Mode 21

Line Mode 22

Auto Talk 23

LCD Contrast 23

Ringer Volume 24

Ringer Tone 26

Preparing the Answering

System 28

Greeting Message 28

Caller's Recording Time 30

Number of Rings 31

Recording Mode 32

Message Alert 32

Telephone System

Making Calls 33

Using the Handset 33

Using the Base Unit 37

Answering Calls 39

Using the Other Line

During a Conversation 40

Caller ID Service 41

Using the Caller List 42

Viewing the Caller List 42

Calling Back from the

Caller List 43

Editing the Caller's Phone

Number 44

Caller ID Number Auto Edit . . 45

Storing Caller Information

in the Phone Book 46

Erasing Caller Information . . . 46

Phone Book 47

Storing Names and Numbers . . 47

Dialing from the Phone Book . . 48

Chain Dial 50

Editing an Item in the

Phone Book 51

Erasing an Item in the

Phone Book 51

Copying Items in the

Phone Book 52

Speed Dialer 54

Storing Phone Numbers 54

Dialing a Stored Phone

Number 54

Intercom 55

Making Intercom Calls 55

Answering Intercom Calls 56

Voice Paging 57

Transferring a Call 58

Conference Calls 61

Call Share 62

Room Monitor 63

Special Features 65

Muting Your Conversation . . . 65

Call Privacy 65

Using the PAUSE Button

(For PBX Line/Long Distance

Calls) 65

Temporary Tone Dialing (For Rotary or Pulse Service Users) . . .	66
For Call Waiting Service Users	66
FLASH Button	67
Incoming Call Tone	68
Line Selection	69
Key Tone	70

Answering System

Automatic Answering Operation	71
Setting the Unit to Answer Calls	71
Monitoring Incoming Calls	72
Listening to Messages	73
Using the Base Unit	73
Using the Handset (Remote Operation)	74
Erasing Messages	77
Recording a Memo Message	78
Transferring a Call to the Answering System	79
Remote Operation from a Touch Tone Phone	80
Remote Code	81
Voice Menu	82
Direct Remote Operation	83

Useful Information

Wall Mounting	84
Belt Clip	87
Optional Headset	87
Direct Commands	88
Canceling Registration/ Re-registration	90
Canceling the Handset Registration	90
Re-registering the Handset	90
If the Following Appear on Your Display...	92
Troubleshooting	94
Important Safety Instructions	99
FCC and Other Information	100
Index	103
Warranty	105
Specifications	107

Important

Throughout these Operating Instructions, **Handset** and **Base Unit** are used to indicate with which unit an operation can be performed.

Handset : Perform with the handset.

Base Unit : Perform with the base unit.

Handset Base Unit : Perform with the handset and base unit separately.

Handset & Base Unit : Perform with the handset and base unit together.

For Best Performance

Battery charge

The handset is powered by a rechargeable Nickel-Metal Hydride (Ni-MH) battery. Charge the battery for **6 hours** before initial use (p. 16).




Base unit location/Noise

Calls are transmitted between the base unit and handset using wireless radio waves. **For maximum distance and noise-free operation**, the recommended base unit location is:

Away from electrical appliances such as a TV, personal computer or another cordless phone.

In a **HIGH** and **CENTRAL** location with no obstructions such as walls.


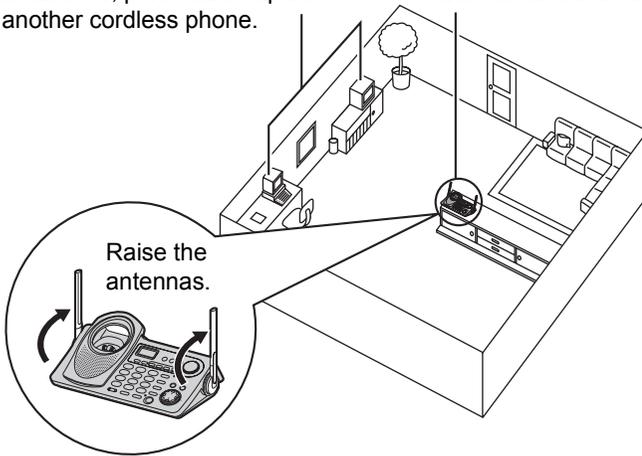


Note:

- If you use the handset near a microwave oven which is being used, noise may be heard from the receiver or the speaker. Move away from the microwave oven and closer to the base unit.
- If you use the handset near another cordless phone's base unit, noise may be heard. Move away from the other cordless phone's base unit and closer to your base unit.


Location of Controls

Base unit

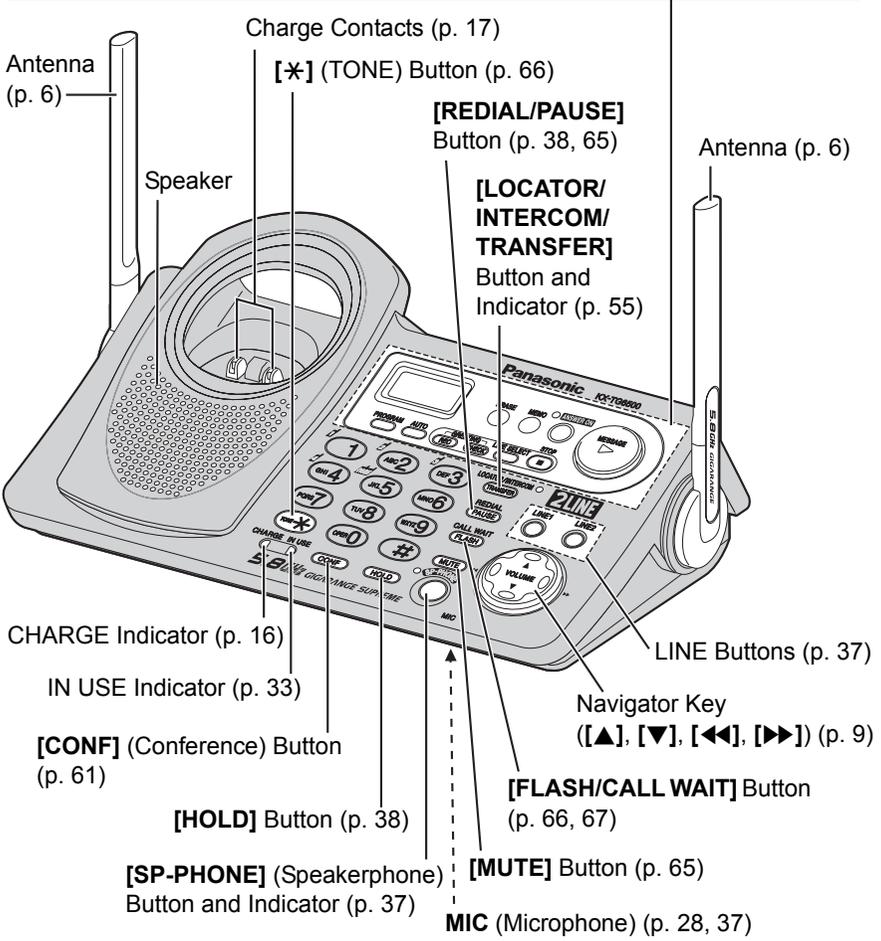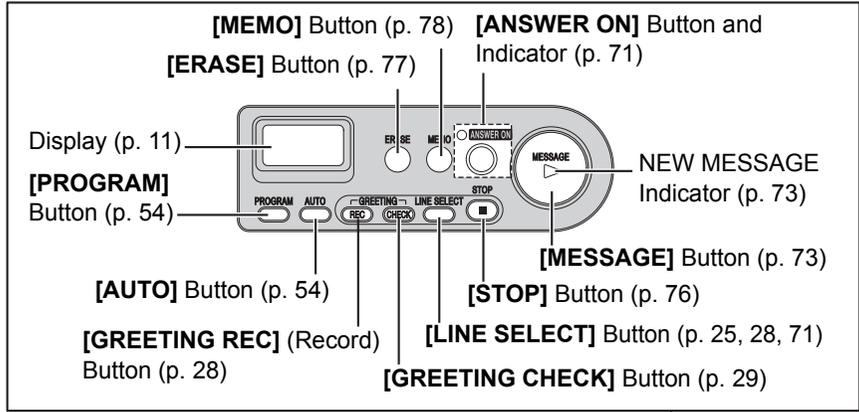


Location of Controls

Handset

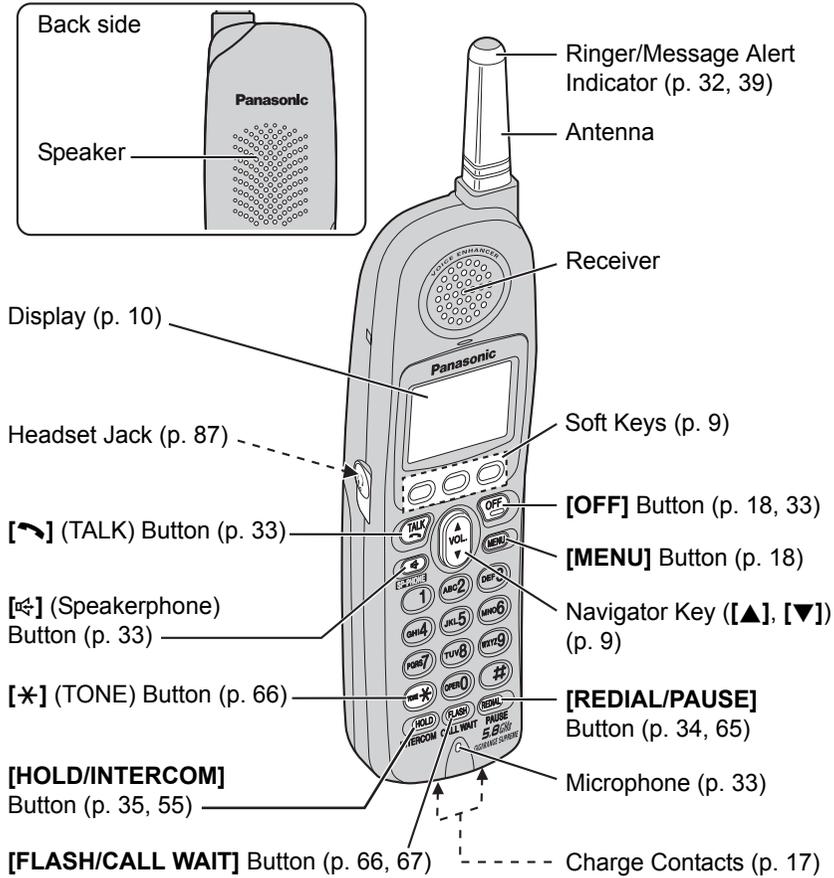


Charger unit (KX-TG6502 only)

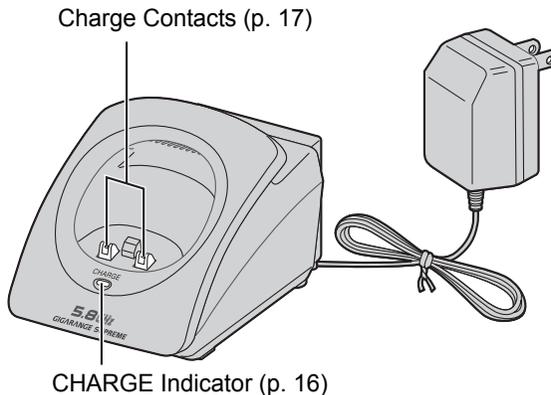

How to use the soft keys/navigator keys

Handset soft keys

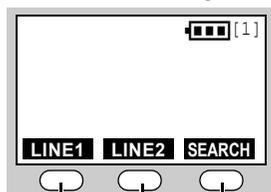

3 soft keys are used to select functions displayed directly above each key. Functions displayed above each key will change depending on the state of use.

On this sample display, “**LINE1**”, “**LINE2**” and “**SEARCH**” are displayed above the soft keys.

Pressing the right soft key selects “**SEARCH**”.

Pressing the middle soft key selects “**LINE2**”.

Pressing the left soft key selects “**LINE1**”.

- When a function name does not appear above a soft key, the soft key has no function.

Throughout these Operating Instructions, the soft keys are indicated by their icons, such as **LINE1**, **LINE2** and **SEARCH**.

Handset navigator key



Scrolls up [▲] and down [▼] the function menu, the Caller List and the phone book.
Increases [▲] or decreases [▼] the handset ringer and receiver/speaker volumes.

Throughout these Operating Instructions, the handset navigator key is indicated by the arrows [▼] and [▲].

Base unit navigator key




Increases [▲] or decreases [▼] the base unit speaker volumes.
Increases [▲] or decreases [▼] the base unit ringer volume for the line after pressing [LINE SELECT] (p. 25).
[◀◀] and [▶▶] select the base unit ringer tone for the line after pressing [LINE SELECT] (p. 27).
Repeats [◀◀] or skips [▶▶] recorded messages.

Throughout these Operating Instructions, the base unit navigator key is indicated by the arrows [▼], [▲], [◀◀] and [▶▶].

Displays

Handset

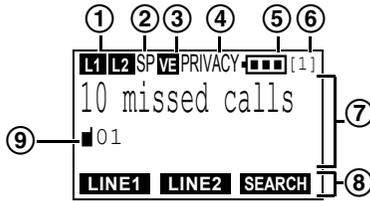


① “**L1**” and “**L2**” indicate the status of each line as follows:

Off (invisible)	The line is free.
On	The line is being used.
Flashing	A call is on hold on the handset or base unit, or the Answering System is answering a call (p. 71).
Flashing rapidly	A call is being received.

- ② “SP” is shown when you are using the handset speakerphone.
- ③ “**VE**” indicates Voice Enhancer mode is on (p. 36).
- ④ “PRIVACY” indicates Call Privacy mode is on (p. 65). Other extension users cannot join your conversation.
- ⑤ The battery icon indicates battery strength (p. 16).
- ⑥ The extension number of your handset is displayed if it has been registered to the base unit (p. 3, 90, 91).
- ⑦ The display shows the dialed number, call status, programming options, phone book items, Caller ID information, etc.
- ⑧ The icons on the bottom line indicate the functions of the corresponding soft keys which are located directly below the display (p. 9).
- ⑨ “**■**” (extension icon) and extension numbers are displayed (ex. base unit=“0”, handset 1=“1”)
 - a) during an intercom call (p. 55) or a conference call (p. 61);
 - b) while monitoring a room (p. 64).

Base unit

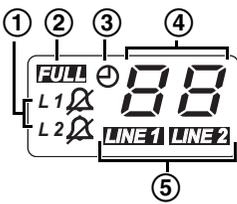

① “L1” indicates the line 1 ringer on the base unit is off (p. 25).

“L2” indicates the line 2 ringer on the base unit is off (p. 25).

② “FULL” flashes when no new messages can be recorded. Erase unnecessary messages (p. 77).

③ “⌚” flashes until you set the date and time, and flashes after a power failure. If it is flashing, set the date and time (p. 20).

④ Message counter shows:

- the number of recorded messages (p. 73). If the recording time is set to “Greeting only”, “99” will be displayed for a few seconds when you turn the Answering System on (p. 71).
- the selected volume level while you are adjusting the speaker volume (p. 29, 37).
- “P” when [PROGRAM] is pressed to store a phone number (p. 54).
- “E” when your greeting message or memo message was not recorded correctly (p. 28, 78).

⑤ “LINE 1” and/or “LINE 2” will be displayed when selecting the line(s)

- a) to record the greeting message (p. 28);
- b) to turn the Answering System on (p. 71);
- c) to play back messages (p. 29, 73);
- d) to erase messages (p. 77);
- e) to change the ringer volume or tone (p. 25, 27).


“LINE 1” and/or “LINE 2” will flash when

- a) the Answering System is answering a call on the line (p. 71);
- b) a message on the line is played (p. 73).

Installation


Connecting the AC Adaptor

Base unit

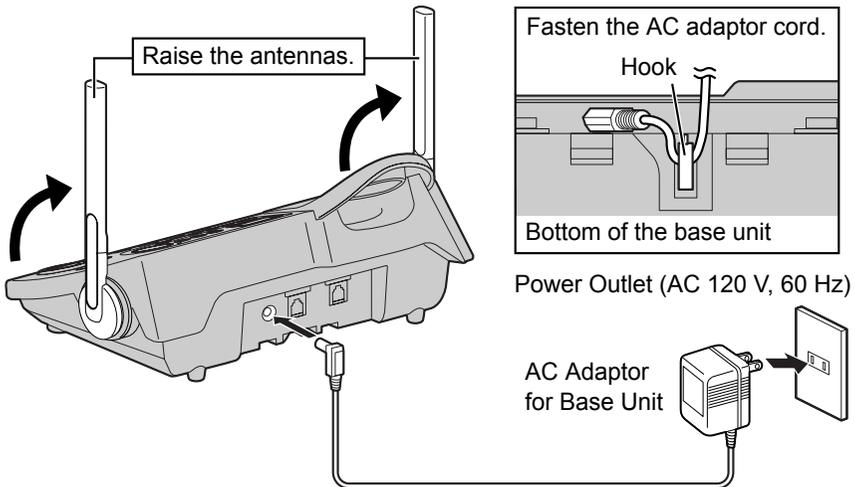

- Base unit: USE ONLY WITH Panasonic AC ADAPTOR PQLV1 (Order No. PQLV1Z).
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.
- If your unit is connected to a PBX which does not support Caller ID, you cannot access Caller ID services.
- This unit will not function during a power failure. We recommend connecting a standard telephone to the same telephone line or to the same telephone jack using the Panasonic KX-J66 T-adaptor, or using the Panasonic Battery Back-Up Power Supply KX-TCA200.

Charger unit (KX-TG6502 only)

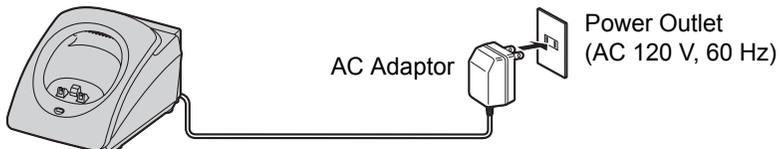


- Charger unit: USE ONLY WITH Panasonic AC ADAPTOR KX-TCA1 (Order No. KX-TCA1-G).
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.

Connecting the Telephone Line Cord


Connect the telephone line cord(s) to the base unit.
If your unit is connected to a telephone line with DSL service, see page 15.

To connect to a 2-line telephone jack

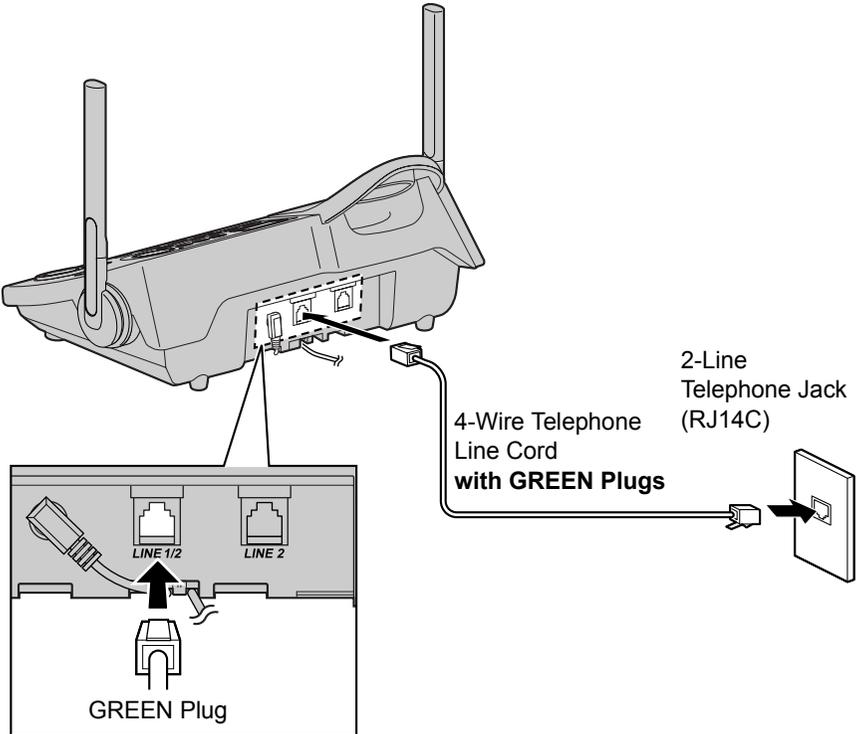


Installation

To connect to 2 single-line telephone jacks

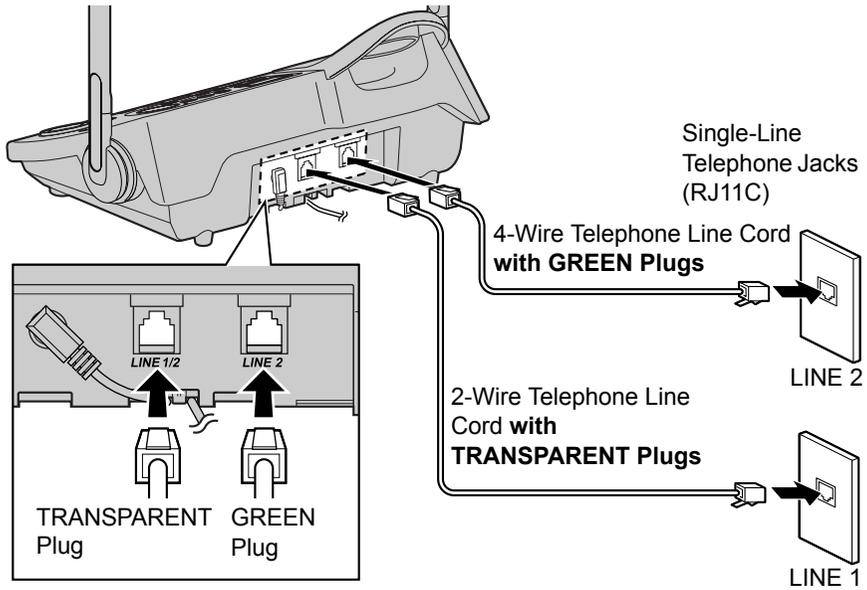

If you use the unit as a single-line telephone only

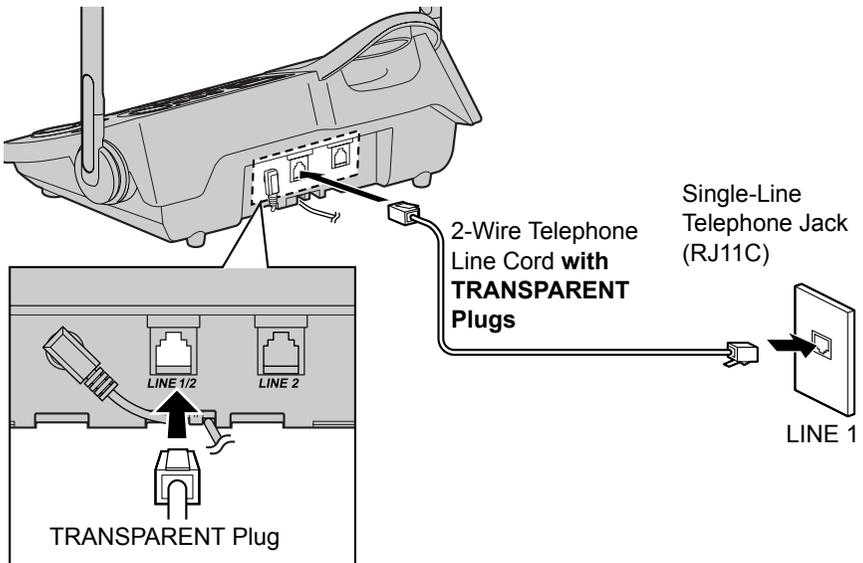


For DSL service users

If the unit is connected to a telephone line with DSL service, you may hear noise from the receiver or speaker during conversations or the unit may not display caller's name and/or phone number properly. We recommend connecting a **noise filter*** (contact your DSL service provider) to the DSL telephone line between the base unit and the telephone line jack.

■ Connecting a 2-line telephone jack

For this connection, please purchase the Panasonic T-adaptor KX-J24. To order, call the accessories telephone number on page 2.

Ex. DSL line is LINE 2.

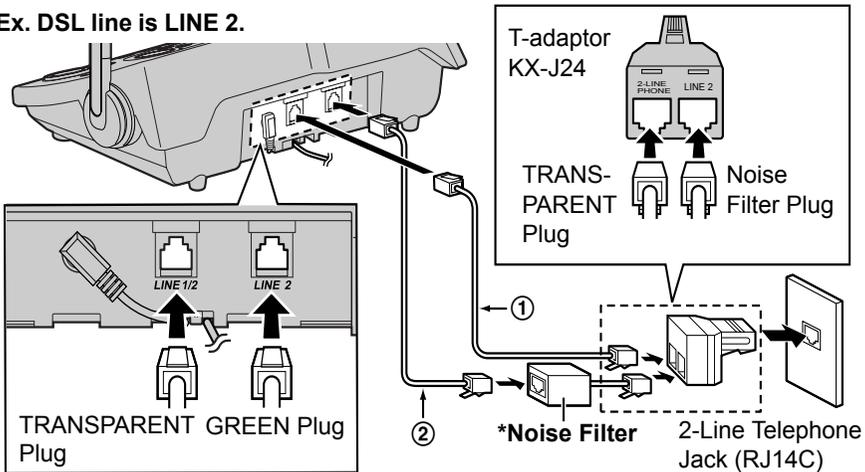


① 2-Wire Telephone Line Cord with **TRANSPARENT** Plugs

② 4-Wire Telephone Line Cord with **GREEN** Plugs

■ Connecting 2 single-line telephone jacks

Ex. DSL line is LINE 2.

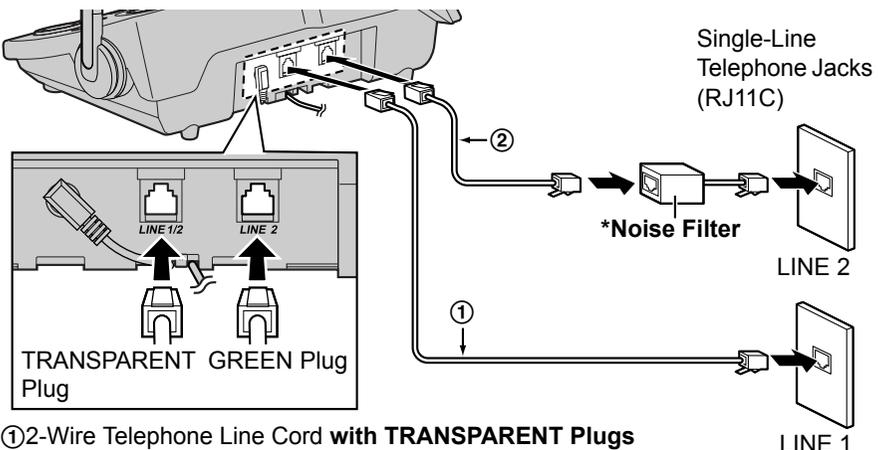


① 2-Wire Telephone Line Cord with **TRANSPARENT** Plugs

② 4-Wire Telephone Line Cord with **GREEN** Plugs

Installation

Installing the Battery in the Handset

Insert the battery (①), and press it down until it snaps into the compartment (②). Close the cover.

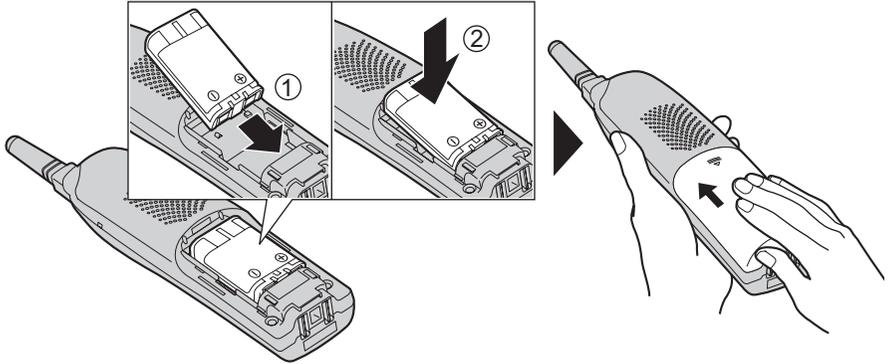

To replace the battery:


Press the notch on the cover firmly and slide it as indicated by the arrow. Replace the old battery with a new one (p. 17). Close the cover and charge the handset for 6 hours.



Battery Charge

Place the handsets on the base unit and charger for **6 hours** before initial use.

- The unit beeps once, the CHARGE indicator lights and "Charging" is displayed.
- When the battery is fully charged, "Charge completed" is displayed if there are no new calls in the Caller List.

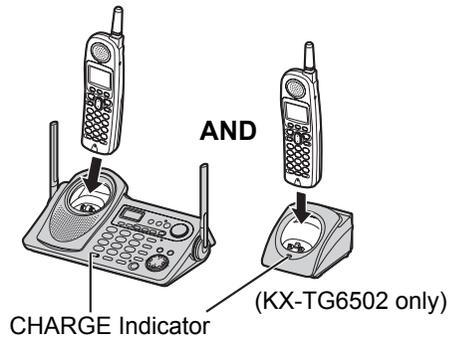

Battery strength

You can confirm the battery strength on the handset display.

Battery strength is indicated by the icons shown in the chart to the right.

Display prompt	Battery strength
	Fully charged
	Medium
	Low
(flashing)	Needs to be recharged.
	Discharged

Recharge

Recharge the battery when:

- “Recharge battery” is displayed on the handset,
- “” flashes, or
- the handset beeps intermittently while it is in use.



- The display will continually indicate “Recharge battery” and/or “” will flash when the handset battery is charged for less than 15 minutes and the handset is lifted off the base unit or charger.
- If the battery has been discharged, the handset will display “Charge for 6 HRS” and “” when you place the handset on the base unit or charger. The handset will not work unless the battery is charged. Continue charging.

Battery replacement:

If you cleaned the charge contacts and fully charged the battery, but after a few telephone calls, “Recharge battery” is displayed and/or “” continues to flash, or “Charge for 6 HRS” and “” are displayed, the battery may need to be replaced. Please order a new Panasonic HHR-P104 battery at the telephone number shown on page 2. To replace the battery, see page 16.

A nickel metal hydride battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.



Battery information

After your Panasonic battery is fully charged, you can expect the following performance:


Operation	Operating time
While in use (TALK)	Up to 5 hours
While not in use (Standby)	Up to 11 days
While using the Clarity Booster feature (p. 36)	Up to 3 hours

- A fully charged battery will give you up to 5 hours of continuous talk time, or keep your handset in Standby mode to receive incoming calls for up to 11 days (if no phone calls are made). Battery power is consumed whenever the handset is off of the base unit or charger, even when the handset is not in use. The longer you leave the handset off of the base unit or charger, the time you can actually talk on the handset will be shortened. Actual battery performance depends on a combination of how often the handset is in TALK mode and how often it is in Standby mode.
- **Clean the charge contacts of the handset, the base unit and charger with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** Otherwise the battery may not charge properly.
- If the battery is fully charged, you do not have to place the handset on the base unit or charger until “Recharge battery” is displayed and/or “” flashes. This will maximize the battery life.
- If you want to keep the battery fully charged at all times, place the handset on the base unit or charger when the handset is not used. The battery cannot be overcharged.
- When the Clarity Booster feature is turned on automatically or manually, battery operating time may be shortened (p. 36).

Programmable Settings

Programming Guidelines **Handset**

The unit has several programmable functions which can be selected from the function menu on the display (p. 19).

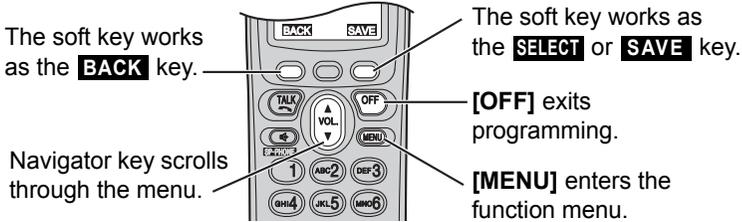


How to select a function item from the menu

Make sure the handset and base unit are not being used. The handset must be operated near the base unit and while off the base unit or charger.

- 1 Press **[MENU]**.
 - The main menu is displayed (p. 19).

- 2 Scroll to the desired item by pressing **[▼]** or **[▲]**.

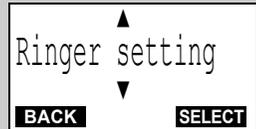

- 3 Press the soft key (**SELECT**) to select the desired item.

- 4 If the item has a sub-menu, select the menu item (p. 19). Repeat steps 2 and 3 until the desired item is displayed. If the item has no sub-menu, go to step 5.

- 5 Select the desired setting by pressing **[▼]** or **[▲]**, then press the soft key (**SAVE**).
 - A confirmation tone will be heard and the setting will be saved.



- 6 Press **[OFF]** to exit programming mode.

- To go back to the previous menu, press the soft key (**BACK**), or press the soft key (**SELECT**) while "--- (Go back) ---" is displayed. If you press this key in the main menu, the unit will exit programming mode.
- After programming is complete, the display will return to the main menu or the sub-menu depending on which menu the selected item is located. (See the menu table on page 19.)
- You can exit programming mode at any time by pressing **[OFF]**.
- If you do not press any buttons for 60 seconds, the unit will exit programming mode.
- If the unit detects a problem, an error message will be displayed (p. 92–94) and/or error beeps will sound.

Programmable Settings

Function Menu Table **Handset**

You can use the following functions to customize your unit. See the corresponding pages for function details.

- After pressing **[MENU]**, you can also program menu items directly by pressing (**[0]** to **[9]**, **[*]** and **[#]**) instead of using the soft keys (p. 88, 89).

Main menu	Sub-menu I	Sub-menu II
→ Message play p. 74		
Phone book p. 47 p. 49		
Ringer setting	Ringer volume p. 24	
Date and time p. 20	Ringer tone p. 26	
Voice enhancer p. 36	Incoming call. p. 68	
Copy phone book	Copy 1 item p. 52	
	Copy all items p. 53	Number of rings p. 31
Initial setting	Set answering	Recording time p. 30
	Message alert p. 32	Remote code p. 81
	LCD contrast p. 23	Recording mode p. 32
	Key tone p. 70	
	Auto talk p. 23	
	Room monitor p. 63	
	Caller ID edit p. 45	Line selection p. 69
	Set tel line	Set dial mode p. 21
		Set flash time p. 67
		Set line mode p. 22
		Ringer volume p. 25
		Ringer tone p. 27
	Set base unit	Incoming call. p. 68
		Room monitor p. 63
		Line selection p. 70
	Registration	HS registration p. 91
	Change language p. 21	Deregistration p. 90

- If you program the date and time, dialing mode, flash time, line mode, number of rings, recording time, recording mode or the remote code using one of the handsets, you will not need to program the same item using another handset.


Programmable Settings

Date and Time **Handset**

We recommend you set the date and time so that the unit will announce the day and time each message was recorded when you play back messages.

1 Press **[MENU]**.

2 Scroll to "Date and time" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

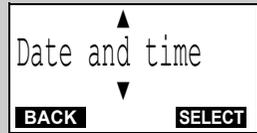

3 (1) Enter 2 digits each for the month, day and year. (Ex. To set May 15, 2004, enter "05 15 04".)

(2) Enter 4 digits for the time (hour and minute). (Ex. To set 9:30, enter "0930".)

- If you enter a wrong number, press the soft key **(◀)** or **(▶)**, or press **[▲]** or **[▼]** to move the cursor to the incorrect number. Enter the correct number.



4 Select "AM" or "PM" by pressing **[*]**.

5 Press the soft key **(SAVE)**.

- The date and time are set and "Ⓞ" disappears from the base unit display.
- If the handset beeps 3 times, the date and time were not set correctly. Start again from step 3.

6 Press **[OFF]**.

- When entering the time, you cannot enter numbers greater than 12. **Do not use military time.** (To set 13:00 hours, enter "0100", and select "PM" in step 4.)

The date and time may be incorrect after a power failure. When "Ⓞ" flashes on the base unit display, set the date and time again.

To confirm the date and time, repeat steps 1 and 2.

- The current date and time are displayed. When finished, press **[OFF]**.

For Caller ID service users (p. 41)

- When a call is received, Caller ID information adjusts the date and time if the time is incorrect.
- Caller ID information will automatically adjust the date and time for daylight saving time.
- If the date and time have not been previously set, Caller ID information will not adjust the date and time.

Programmable Settings

Display Language **Handset**

You can select either “English” or “Spanish” as the display language. The factory preset is “English”.

1 Press [MENU] .	
2 Scroll to “ Initial setting ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Scroll to “ Change language ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Change language
4 To change from English to Spanish, press the soft key (ESPAÑOL). To change from Spanish to English, press the soft key (ENGLISH). <ul style="list-style-type: none">• The display changes to the selected language.• You can also select the display language by pressing [▼] or [▲].	Display :English
5 When Spanish is selected, press the soft key (GUARDAR), then press [OFF] . When English is selected, press the soft key (SAVE), then press [OFF] .	

- If you select a language you cannot read, change the display language again using direct commands (p. 89).

Dialing Mode **Handset**

If you have touch tone service, set the dialing mode to “Tone”. For rotary or pulse service, set to “Pulse”. The factory preset is “Tone”.

1 Press [MENU] .	
2 Scroll to “ Initial setting ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Scroll to “ Set tel line ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Set tel line
4 Scroll to “ Set dial mode ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Set dial mode
5 Select “ Pulse ” or “ Tone ” by pressing [▼] or [▲] .	Set dial mode :Tone
6 Press the soft key (SAVE), then press [OFF] .	

Programmable Settings

Line Mode **Handset**

The line mode for both lines is preset to “B” and generally should not be adjusted. If the line buttons on the base unit do not light properly, or the line status icons (**L1** and **L2**) are not displayed on the handset properly, the line mode selection is incorrect. Set line mode to “A”. Each line has its own setting.

1 Press [MENU] .	
2 Scroll to “Initial setting” by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Scroll to “Set tel line” by pressing [▼] or [▲] , then press the soft key (SELECT).	Set tel line
4 Scroll to “Set line mode” by pressing [▼] or [▲] , then press the soft key (SELECT).	Set line mode
5 Press [▼] (Line1) or [▲] (Line2) to select the line.	Set line mode ▼=Line1 ▲=Line2
6 Select “A” or “B” by pressing [▼] or [▲] .	Set line mode Line1:B
7 Press the soft key (SAVE) • To select the other line, repeat from step 4.	
8 Press [OFF] .	

Programmable Settings

Auto Talk **Handset**

The Auto Talk feature allows you to answer calls by simply lifting the handset off the base unit or charger (for KX-TG6502 or accessory handset users, p. 3). You do not need to press [📞] or [📞]. The factory preset is OFF.

1 Press [MENU].	
2 Scroll to "Initial setting" by pressing [▼] or [▲], then press the soft key (SELECT).	Initial setting
3 Scroll to "Auto talk" by pressing [▼] or [▲], then press the soft key (SELECT).	Auto talk
4 Select "on" or "off" by pressing [▼] or [▲].	Auto talk :Off
5 Press the soft key (SAVE), then press [OFF].	

- In order to view Caller ID information after you lift the handset to answer a call, leave the Auto Talk feature turned off.
- If you change the line selection feature from "Auto" to "Line 1" or "Line 2" (p. 69), the Auto Talk feature will function for that line only. If the other line receives a call, the Auto Talk feature will not function.

LCD Contrast **Handset**

There are 6 levels of LCD contrast. The factory preset is "level 3".

1 Press [MENU].	
2 Scroll to "Initial setting" by pressing [▼] or [▲], then press the soft key (SELECT).	Initial setting
3 Scroll to "LCD contrast" by pressing [▼] or [▲], then press the soft key (SELECT).	LCD contrast
4 Select the desired contrast by pressing [▼] or [▲]. <ul style="list-style-type: none">• The contrast will change.• The number of steps indicates the contrast level.	Ex. Level 3 LCD contrast Low  High
5 Press the soft key (SAVE), then press [OFF].	

 

Programmable Settings

Ringer Volume

You can set the handset and base unit ringer volumes to high, medium, low, or off for each line. The factory preset for both lines is HIGH.

If the handset or base unit ringer is turned off for both lines, the handset or base unit will ring at the low level for intercom calls, and will not ring for outside calls.

Handset ringer volume **Handset**

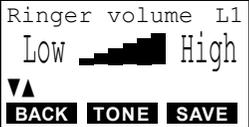1 Press [MENU] .	
2 Scroll to “ Ringer setting ” by pressing [▼] or [▲] , then press the soft key (SELECT).	
3 Press the soft key (SELECT) at “ Ringer volume ”.	
4 Press [▼] (Line1) or [▲] (Line2) to select the line.	
5 Select the desired volume by pressing [▼] or [▲] . <ul style="list-style-type: none">• The volume will change and ring.• The number of steps indicates the volume level.• To turn the ringer off, press [▼] repeatedly until “off ?” is displayed. To change the ringer tone, press the soft key (TONE). Select the ringer tone by pressing [▼] or [▲] . See “Handset ringer tone” on page 26, step 5.	 <p>Ex. High</p>  <p>Ex. Off</p>
6 Press the soft key (SAVE). <ul style="list-style-type: none">• To select the other line, repeat from step 3.	
7 Press [OFF] .	
<ul style="list-style-type: none">• If the handset ringer is turned off for a line, the handset displays “Ringer off” and the line number while the handset is not in use. If there are new messages, “Ringer off” will not be displayed.• You can also adjust each line’s ringer volume while the line is ringing. Press [▼] or [▲] while the handset is ringing.	

Programmable Settings

Temporary ringer off

While the handset is ringing, you can turn the ringer off temporarily by pressing [OFF]. The handset will ring again the next time a call is received for that line.

Base unit ringer volume (use either the base unit or the handset)

 
Base Unit

Make sure the base unit is not being used.

- 1 Select either line by pressing [LINE SELECT] until "LINE 1" or "LINE 2" is announced.

- The selected line (**LINE 1** or **LINE 2**) is displayed.
- Do not select both lines. You can not set the ringer for both lines at the same time.

Ex. LINE 1 selected.



- 2 To set the ringer volume to high (preset), medium, or low, press [▼] or [▲].

- To increase volume, press [▲]. To decrease volume, press [▼].
- To change the ringer tone, press [◀◀] or [▶▶] (p. 27).
- To stop ringing, press [STOP].

To turn the ringer off, press and hold [▼] until 2 beeps sound.

- "L 1 ~~☒~~" or "L 2 ~~☒~~" is displayed.

To turn the ringer on, press [▼] or [▲] in step 2.

- The base unit will ring at the low level for the line.
- You can adjust the base unit ringer volume while the line is ringing. Press [▼] or [▲] while the line is ringing. To turn the ringer off, press and hold [▼] until 2 beeps sound. "L 1 ~~☒~~" or "L 2 ~~☒~~" is displayed.

Selecting the base unit ringer volume by using the Handset

- 1 Press [MENU].
- 2 Scroll to "Initial setting" by pressing [▼] or [▲], then press the soft key (**SELECT**).
- 3 Scroll to "Set base unit" by pressing [▼] or [▲], then press the soft key (**SELECT**).
- 4 Press the soft key (**SELECT**) at "Ringer volume".
- 5 Follow steps 4 to 7 of "Handset ringer volume" on page 24.
 - When selecting the ringer volume, the base unit will ring.

Programmable Settings

Ringer Tone

You can set the handset and base unit ringers to use one of 8 ringer patterns for each line. “Tone 1” to “Tone 4” are bell ringer patterns. “Melody 1” to “Melody 4” are melody patterns. LINE 1 is preset to “Tone 1”. LINE 2 is preset to “Tone 2”.

- You cannot change the ringer tone for intercom calls.
- If you subscribe to a Distinctive Ring Service (such as IDENTIA-RING) from your telephone company with 2 or 3 consecutive rings, select a bell ringer pattern (Tone 1 to 4). If you select a melody pattern, you will not be able to distinguish lines by their ringers.
- If you select one of the melody ringer patterns, the ringer will continue to sound for several seconds if:
 - the caller hangs up before you answer the call, or
 - another person answers the call using another phone connected on the same line.
- If LINE 1 and LINE 2 have different ringer patterns and both lines receive calls simultaneously, both ringers will ring alternately.

Handset ringer tone **Handset**

1 Press **[MENU]**.

2 Scroll to “**Ringer setting**” by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Ringer setting

3 Scroll to “**Ringer tone**” by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Ringer tone

4 Press **[▼]** (Line1) or **[▲]** (Line2) to select the line.

Ringer tone
▼=Line1 ▲=Line2

5 Select the desired ringer tone by pressing **[▼]** or **[▲]**.

- The handset will ring and the ringer tone will change. If the ringer volume has been turned off, the handset will not ring.

Ringer tone L1
1:Tone 1
▼▲
BACK **VOLUME** **SAVE**

- You can also select the ringer tone by pressing **[1]** to **[8]**.
[1] to **[4]**: Bell ringer patterns
[5] to **[8]**: Melody patterns

To adjust the ringer volume, press the soft key (**VOLUME**). Adjust the ringer volume by pressing **[▼]** or **[▲]**. See “Handset ringer volume” on page 24, step 5.

6 Press the soft key (**SAVE**).

- To select the other line, repeat from step 3.

7 Press **[OFF]**.

Programmable Settings

Base unit ringer tone (use either the base unit or the handset)

Base Unit

Make sure the base unit is not being used.

- 1 Select either line by pressing **[LINE SELECT]** until “LINE 1” or “LINE 2” is announced.
 - The selected line (**LINE 1** or **LINE 2**) is displayed.
 - Do not select both lines. You cannot set the ringer for both lines at the same time.

Ex. LINE 2 selected.



- 2 Press **[◀◀]** or **[▶▶]** repeatedly to select the desired tone.
 - Each time you press **[◀◀]** or **[▶▶]**, another ringer tone will be heard and selected.
 - If the ringer volume has been turned off, the base unit will not ring. Press **[▼]** or **[▲]** to turn the ringer on.
 - To stop ringing, press **[STOP]**.
 - You can also select the ringer tone by pressing **[1]** to **[8]**.
 - [1]** to **[4]**: Bell ringer patterns
 - [5]** to **[8]**: Melody patterns
 - To change the ringer volume, press **[▲]** or **[▼]** (p. 25, step 2).

Selecting the base unit ringer tone by using the Handset

- 1 Press **[MENU]**.
- 2 Scroll to “Initial setting” by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).
- 3 Scroll to “Set base unit” by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).
- 4 Scroll to “Ringer tone” by pressing **[▲]** or **[▼]**, then press the soft key (**SELECT**).
- 5 Follow steps 4 to 7 of “Handset ringer tone” on page 26.
 - When selecting the ringer tone, the base unit will ring. If the base unit ringer volume has been turned off (p. 25), the base unit will not ring.

Preparing the Answering System

Greeting Message **Base Unit**

You can record a personal greeting message of **up to 2 minutes** for each line or a common greeting message for both lines. If you do not record your own message, one of 2 pre-recorded greetings will be played for callers (p. 29).

The total recording time of all messages (greeting, incoming and memo) is **about 60 minutes**. We recommend you record a **brief greeting message** in order to leave more time for recording new messages.

- You can use the enhanced recording mode for clearer sound, if necessary (p. 32).

To record a greeting message

Greeting message samples

“Hello, this is (your name and/or number). Sorry, I cannot take your call. Please leave a message after the beep. Thank you.”

- 1 To record a common greeting for both lines, press **[LINE SELECT]** repeatedly until “LINE 1 and LINE 2” is announced.

- “**LINE 1 LINE 2**” is displayed.

To record a greeting for either line individually, press **[LINE SELECT]** repeatedly until “LINE 1” or “LINE 2” is announced.

- “**LINE 1**” or “**LINE 2**” is displayed.

- 2 Press **[GREETING REC]**.

- “To record greeting, press RECORD again” is heard.

- 3 Within 10 seconds, press **[GREETING REC]** again to record your greeting.


- 4 After the long beep, talk clearly, about 20 cm (8 inches) away from the **MIC** (microphone).

- The elapsed recording time is displayed.
- If you record for over 2 minutes, the unit will stop recording.

- 5 When finished, press **[GREETING REC]** or **[STOP]**.

- To change the greeting, start again from step 1.

To review the greeting, press **[GREETING CHECK]** when finished (p. 29).

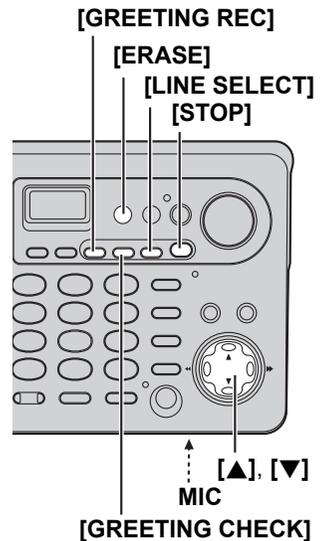

Preparing the Answering System

- If “E” is displayed, 6 beeps sound and “Your greeting was not recorded. Record your greeting again.” is announced, start again from step 1.

To review the greeting

1. Select the line(s) by pressing [**LINE SELECT**].
2. Press [**GREETING CHECK**].
 - When both lines are selected and they have separate greetings, the LINE 1 greeting will be played first.

To adjust the speaker volume, press [**▼**] or [**▲**] during playback.

- 9 levels (0–8) are available while using the Answering System. The level is displayed on the base unit.

To erase the greeting

1. Select the line(s) by pressing [**LINE SELECT**].
2. Press [**GREETING CHECK**], then press [**ERASE**] while the recorded message is being played.
 - The unit will answer calls for the line using a pre-recorded greeting (see below).

Pre-recorded greeting

If you do not record a greeting (p. 28), one of 2 greetings will be played when a call is received, depending on the caller’s recording time (p. 30).

To review the pre-recorded greeting, select the line(s) by pressing [**LINE SELECT**], then press [**GREETING CHECK**].

- A pre-recorded greeting will be played as follows:
 - When the recording time is set to “1 minute”, “2 minutes” or “3 minutes”:
“Hello, we are not available now. Please leave your name and phone number after the beep. We will return your call.”
 - If recording time runs out, the unit will automatically switch to the “Greeting only” mode (see below), and no new messages will be recorded.
 - When the recording time is set to “Greeting only”:
“Hello, we are not available now. Please call again. Thank you for your call.”

Flash Memory Message Backup (Message storage)

Messages stored in memory will not be affected by power failures. All messages are saved until you erase them.

Preparing the Answering System

Caller's Recording Time **Handset**

You can select "1 minute", "2 minutes", "3 minutes" or "Greeting only" for the caller's recording time. Each line has its own setting. The factory preset for both lines is "3 minutes".

1 Press [MENU] .	
2 Scroll to "Initial setting" by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Press the soft key (SELECT) at "Set answering".	Set answering
4 Scroll to "Recording time" by pressing [▼] or [▲] , then press the soft key (SELECT).	Recording time
5 Press [▼] (Line1) or [▲] (Line2) to select the line.	Recording time ▼=Line1 ▲=Line2
6 Select the recording time by pressing [▼] or [▲] . <ul style="list-style-type: none">You can also select the recording time by pressing [1], [2], [3], or [0] (Greeting only).	Recording time L1:3min
7 Press the soft key (SAVE). <ul style="list-style-type: none">To select the other line, repeat from step 4.	
8 Press [OFF] .	

If you select "Greeting only" for the line(s), the unit will answer a call with the greeting message, and then hang up. The unit will not record any incoming messages for the line(s). When you turn the Answering System on, the base unit will display "☎" and the line(s) (**LINE 1** and/or **LINE 2**) for a few seconds.

Preparing the Answering System

Number of Rings **Handset**

You can select the number of times the unit rings before the Answering System answers a call, from “2” to “7” or “Toll saver”*. Each line has its own setting. The factory preset for both lines is “4”.

1 Press [MENU] .	
2 Scroll to “ Initial setting ” by pressing [▼] or [▲] , then press the soft key (SELECT) .	Initial setting
3 Press the soft key (SELECT) at “ Set answering ”.	Set answering
4 Press the soft key (SELECT) at “ Number of rings ”.	Number of rings
5 Press [▼] (Line1) or [▲] (Line2) to select the line.	Number of rings ▼=Line1 ▲=Line2
6 Select the number of rings by pressing [▼] or [▲] . <ul style="list-style-type: none">You can also select the number of rings by pressing [0] (Toll saver*), or [2] to [7].	Number of rings Line1:4
7 Press the soft key (SAVE) . <ul style="list-style-type: none">To select the other line, repeat from step 4.	
8 Press [OFF] .	

*Toll saver

When you call a line to which “Toll saver” has been set, from a remote location, the number of rings will tell you if there are any new messages. If the unit answers on the 2nd ring, there is at least 1 new message. If the unit answers on the 4th ring, there are no new messages. To save the toll charges for the call, hang up immediately when you hear the 3rd ring. The 3rd ring indicates that there are no new messages.

Preparing the Answering System

Recording Mode **Handset**

2 recording modes are available. The factory preset is “Standard recording (60 min)”, which provides more recording time (60 min) and standard sound quality. “Enhanced recording (30 min)” provides less recording time (30 min) but clearer sound quality.

1 Press [MENU] .	
2 Scroll to “ Initial setting ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Press the soft key (SELECT) at “ Set answering ”.	Set answering
4 Scroll to “ Recording mode ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Recording mode
5 Select the recording mode by pressing [▼] or [▲] . • You can also select the recording mode by pressing [1] (Standard) or [2] (Enhanced).	Recording mode :Standard recording 60min
6 Press the soft key (SAVE), then press [OFF] .	

Message Alert **Handset**

You can select whether or not the Ringer/Message Alert indicator on the handset will flash slowly when new messages have been recorded (p. 73). The factory preset is OFF.

1 Press [MENU] .	
2 Scroll to “ Initial setting ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Scroll to “ Message alert ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Message alert
4 Select “ On ” or “ off ” by pressing [▼] or [▲] .	Message alert :Off
5 Press the soft key (SAVE), then press [OFF] .	

- The Ringer/Message Alert indicator will not flash for new messages while the handset is in use.
- The Ringer/Message Alert indicator acts as a ringer indicator and as a message alert indicator. This indicator will flash rapidly when a call is received whether this feature is on or off.
- Battery operating time may be shortened when using this feature (p. 17).

Making Calls

System capabilities

Up to 3 extensions (3 handsets or 2 handsets and the base unit) can be used at a time, providing that the system has 2 or more handsets (p. 3). The maximum operating number may decrease depending on the state of use.

2 outside calls can be handled simultaneously on separate telephone lines by the handset and the base unit, or by 2 handsets.

Using the Handset **Handset**


1 Press [**☎**].

- A free line is automatically selected and the line is displayed. (To change the line selection, see page 69.)
- You can select a line by pressing a line soft key (**LINE1**) or (**LINE2**), instead of pressing [**☎**].
- "Talk" is displayed.

2 Dial a phone number.

- The dialed number is displayed.
- After a few seconds, the display will show the length of the call.

3 To hang up, press [**OFF**] or place the handset on the base unit or charger (for KX-TG6502 or accessory handset users, p. 3).

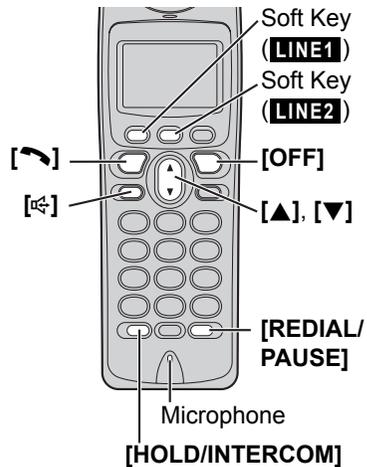

- The line status icons (**L1** and **L2**) show the status of each line (p. 10).
- While using the handset, the IN USE indicator lights on the base unit.

To have a hands-free phone conversation

1 Press [**☎**].

- A free line is automatically selected and the line is displayed. (To change the line selection, see page 69.)
- "SP-phone" is displayed.

2 Dial a phone number.

- The dialed number is displayed.
- After a few seconds, the display will show the length of the call.

3 When the other party answers, talk into the microphone.

4 To hang up, press [**OFF**] or place the handset on the base unit or charger.

Making Calls

Hands-free Digital Duplex Speakerphone

For best performance, please note the following:

- Talk alternately with the other party in a quiet room.
- If you or the other party has difficulty hearing, press [▼] to decrease the speaker volume.
- While talking using [↶], or a line soft key (**LINE1**) or (**LINE2**), you can switch to a hands-free phone conversation by pressing [☎]. To switch back to the receiver, press [↷].

To dial after confirming the entered number

1. Enter a phone number.



- If you misdial, press the soft key (**CLEAR**). Enter the correct phone number.
- If a pause is required when dialing, press **[REDIAL/PAUSE]** where needed (p. 65).
- To cancel, press **[OFF]**.

2. Press [↶], [☎], or a line soft key (**LINE1**) or (**LINE2**).

3. To hang up, press **[OFF]** or place the handset on the base unit or charger.

To adjust the receiver/speaker volume during a conversation

There are 3 volume levels for the receiver and 6 volume levels for the speaker.

To increase volume, press [▲].

Ex. Receiver volume: High
Speaker volume: Level 6

To decrease volume, press [▼].

- The display shows the current volume setting.
- If you try to increase/decrease volume when it is at the maximum/minimum level, the handset will beep 3 times.



To redial the last number dialed

1. Press [↶], [☎], or a line soft key (**LINE1**) or (**LINE2**).
2. Press **[REDIAL/PAUSE]**.

To redial using the redial list (Memory Redial)

The last 5 phone numbers dialed are stored in the redial list.

1. Press **[REDIAL/PAUSE]**.
 - The last number dialed is displayed.
2. Scroll to the desired number by pressing **[▼]** or **[▲]**.
 - You can also scroll down through the list by pressing **[REDIAL/PAUSE]**.
 - To exit the list, press **[OFF]**.
3. Press **[↶]**, **[↷]**, or a line soft key (**LINE1**) or (**LINE2**).
 - **To erase an item**, scroll to the item then press the soft key (**ERASE**).
 - If “No items stored” is displayed, the list is empty.

To put a call on hold

1. Press **[HOLD/INTERCOM]** during a conversation.
 - “**LINE1**” or “**LINE2**” flashes with the line status icon (**L1** or **L2**).
 - “Press extension# to transfer” is displayed.
 - To transfer the call to the base unit or another handset, see page 58; to transfer to the Answering System, see page 79.
2. Press **[HOLD/INTERCOM]** again.
 - “Hold” and the line are displayed.

Ex. LINE1 on hold.



To return to the call, press the line soft key (**LINE1**) or (**LINE2**) that is flashing.

- The base unit user can also take the call by pressing the line button that is flashing.
- Another handset user can also take the call by pressing the line soft key (**LINE1**) or (**LINE2**).
- If another phone is connected on the same line (p. 12), you can also take the call by lifting its handset.
- If a call is kept on hold for 6 minutes, an alarm tone will start to sound and the Ringer/Message Alert indicator will start to flash rapidly. After 4 additional minutes on hold, the call will be disconnected.

Backlit LCD display/Lighted handset keypad

 
The handset display and dialing buttons will light for a few seconds after pressing a button or lifting the handset off the base unit or charger (for KX-TG6502 or accessory handset users, p. 3). They will also light when an intercom/outside call is being received.

Making Calls

Clarity Booster

This feature can improve sound clarity when the handset is used in an area where there may be interference. During an outside call, this feature will be turned on automatically when necessary. This feature will turn off when you hang up, put a call on hold, or make a conference call. It will not turn off automatically during a call. You can also turn this feature on or off manually.

1. Press **[MENU]** during an outside call.
2. Press **[3]** to select “3=Booster on” or “3=Booster off”.



A screenshot of a mobile phone's menu showing three options: 1=Phone book, 2=Privacy on, and 3=Booster on. The number 3 is highlighted, indicating it is the selected option.


- You can also select “3=Booster on” or “3=Booster off” by pressing **[▼]** or **[▲]** then pressing the soft key (**SELECT**).
- While this feature is turned on, “Booster on” will flash during a conversation.
- If this feature is turned off manually during a call, it will not be turned on automatically during the same call.
- When this feature is turned on automatically or manually, battery operating time may be shortened (p. 17).
- The maximum number of extensions which can be used at a time may decrease when using this feature.

Voice Enhancer Technology

Panasonic's Voice Enhancer Technology clarifies the voice of the person you are talking to, reproducing a more natural-sounding voice that is easier to hear and understand. Voice Enhancer Technology can be turned on or off. The factory preset is OFF.

- Depending on the condition and quality of your telephone line, this feature may emphasize existing line noise. If it becomes difficult to hear, turn this feature off.

To turn Voice Enhancer on, press the soft key (**(VE)**) during a conversation.

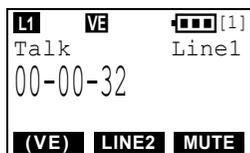


A screenshot of a mobile phone's menu showing the Voice Enhancer feature. At the top, there is a 'L1' indicator, the 'VE' label, and a signal strength indicator with '[1]' next to it. Below this, the text 'Talk Line1' is displayed, followed by the phone number '00-00-32'. At the bottom, there are three soft key options: '(VE)', 'LINE2', and 'MUTE'. The '(VE)' key is highlighted.

- “**VE**” is displayed.
- **To turn this feature off**, press the soft key (**(VE)**) again. “**VE**” disappears from the display.
- After hanging up a call, the on/off setting will be retained.

- “**(VE)**” will not be shown while you are using both lines simultaneously (p. 40, 61). In that event, you can turn this feature on or off during a conversation by performing the following steps:

 1. Press **[MENU]** during a conversation.
2. Press **[4]** to select “4=Voice enhancer” or “V.E. off”.



A screenshot of a mobile phone's menu showing four options: 1=Phone book, 2=Privacy on, 3=Booster on, and 4=Voice enhancer. The number 4 is highlighted, indicating it is the selected option.

- You can also select “4=Voice enhancer” or “4=V.E. off” by pressing **[▼]** or **[▲]** then pressing the soft key (**SELECT**).
- After hanging up a call, the on/off setting will be retained.

- When the handset is not in use, you can also turn this feature on or off by performing the following steps:
 1. Press **[MENU]** while the handset is not in use.
 2. Scroll to “**Voice enhancer**” by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.
 3. Select “**on**” or “**off**” by pressing **[▼]** or **[▲]**.
 4. Press the soft key **(SAVE)**, then press **[OFF]**.

Using the Base Unit **Base Unit**

1 Press **[SP-PHONE]**.

- The SP-PHONE indicator lights.
- A free line is automatically selected and the line button lights. (To change the line selection, see page 70.)
- You can select a line by pressing a line button that does not light, instead of pressing **[SP-PHONE]**.

2 Dial a phone number.

- If you misdial, press **[SP-PHONE]** and start again from step 1.

3 When the other party answers, talk into the **MIC** (microphone).


4 To hang up, press **[SP-PHONE]**.

- The SP-PHONE indicator and line button lights go out.

- To switch to the handset while using the base unit speakerphone:

- If the handset is off the base unit, press the line soft key (**LINE1**) or (**LINE2**) on the handset, then press **[SP-PHONE]** on the base unit.
- If the handset is on the base unit, just lift up.

- The line buttons show the status of each line (p. 38).

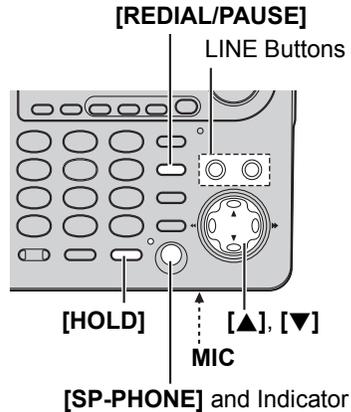

Hands-free Digital Duplex Speakerphone

For best performance, please note the following:

- Talk alternately with the other party in a quiet room.
- If you or the other party has difficulty hearing, press **[▼]** to decrease the speaker volume.

To adjust the speaker volume during a conversation

To increase volume, press **[▲]**. To decrease volume, press **[▼]**.

- There are 8 volume levels. If you try to increase/decrease volume when it is at the maximum/minimum level, the base unit beeps 3 times. The level is displayed on the base unit.

Making Calls

To redial the last number dialed

Press **[SP-PHONE]** or a line button, then press **[REDIAL/PAUSE]**.

To put a call on hold

Press **[HOLD]** during a conversation.

- The line button flashes.

To return to the call, press the line button that is flashing.

- The handset users can also take the call by pressing the line soft key (**LINE1**) or (**LINE2**).
- If another phone is connected on the same line (p. 12), you can also take the call by lifting its handset.
- If a call is kept on hold for 6 minutes, an alarm tone will start to sound. After 4 additional minutes on hold the call will be disconnected.

How the line buttons indicate the line status

The line buttons indicate the status of each line as follows.

Light off	The line is free.
Light on	The line is being used.
Flashing	A call is on hold on the handset or base unit, or the Answering System is answering a call (p. 71).
Flashing rapidly	A call is being received.


Answering Calls

When a call is received, the unit rings, “Incoming call” and the called line are displayed, and the Ringer/Message Alert indicator on the handset and the line button on the base unit flash rapidly.

2 calls can be handled simultaneously on separate telephone lines by the handset and the base unit, or by 2 handsets (when the system has 2 or more handsets, p. 3).

Handset

- 1 Press [] or [].
 - The called line is automatically selected. (To change the line selection, see page 69.)
 - You can also answer a call by pressing the called line soft key (**LINE1**) or (**LINE2**).
 - You can also answer a call by pressing any button except [], [] or [**OFF**].
- 2 To hang up, press [**OFF**] or place the handset on the base unit or charger (for KX-TG6502 or accessory handset users, p. 3).

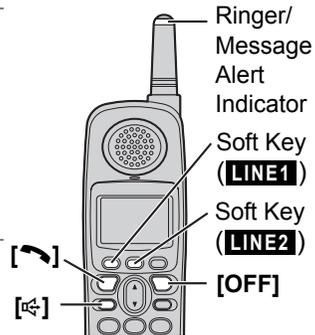

Auto Talk


If the Auto Talk feature is turned on (p. 23), you can answer a call by simply lifting the handset off the base unit or charger.

Temporary ringer off

While the handset is ringing, you can turn the ringer off temporarily by pressing [**OFF**]. The handset will ring again the next time a call is received on that line.

Base Unit

- 1 Press [**SP-PHONE**].
 - The called line is automatically selected. (To change the line selection, see page 70.)
 - You can also answer a call by pressing the called line button.
- 2 Talk into the MIC.
- 3 To hang up, press [**SP-PHONE**].

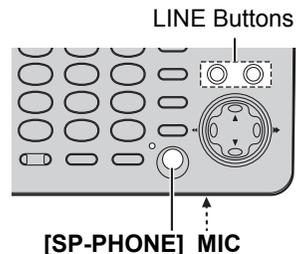

- To transfer the call to another extension, see page 58.
- To transfer the call to the Answering System to allow the caller to leave a message, see page 79.
- If the ringer volume is turned off for the called line, the unit will not ring for the line (p. 24, 25).

Using the Other Line During a Conversation

When a call is being received on the other line during a conversation, you will hear **2 tones**. The line button will flash rapidly on the base unit.

You can answer the second call while holding the first call. You can also make a call without terminating the first call.

You can turn off the **2 tones** (Incoming call tone). See page 68.

If you subscribe to Caller ID, the second caller's information will be displayed when a call is being received on the other line (p. 41).


Handset

1 Ex. If you are using LINE 1

Press **[HOLD/INTERCOM]** 2 times to put the first call (LINE 1) on hold.

- "**LINE1**" flashes on the display.


Ex. Receiving a second call

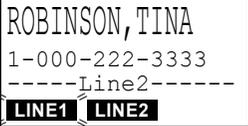

ROBINSON, TINA
1-000-222-3333
-----Line2-----
LINE1 **LINE2**

2 Press the other line soft key (**LINE2**) to make or answer a second call.

- To hold the second call, press **[HOLD/INTERCOM]** 2 times.

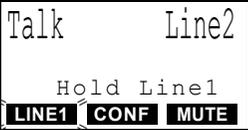

Talk Line2
Hold Line1
LINE1 **CONF** **MUTE**

3 To return to the first call (LINE 1), press the line soft key (**LINE1**) for the first call (LINE 1).

- The second call is terminated.

Base Unit

1 Ex. If you are using LINE 1

Press **[HOLD]** to put the first call (LINE 1) on hold.

- The LINE 1 button flashes.

2 Press the other line button (LINE 2) to make or answer a second call.

- The LINE 2 button lights.
- To hold the second call, press **[HOLD]**.

3 To return to the first call (LINE 1), press the line button for the first call (LINE 1).

- The second call is terminated.

Caller ID Service

This unit is compatible with Caller ID services offered by your telephone company. If you subscribe to Caller ID, caller names and phone numbers will be displayed and recorded in the Caller List.

How Caller ID information is displayed

When a call comes in, the unit will ring and Caller ID information will be received. The handset display will show the caller's information* and the called line.

Example

```
ROBINSON, TINA
1-555-222-3333
-----Line1-----
```

- After you answer the call, the display will show the length of the call.

*Personalized Name Display

If you receive a call from one of the phone numbers stored in the phone book, the handset will show the caller's name stored in the phone book instead of incoming caller's name.

- Numbers and names programmed in the phone book will be displayed in the Caller List as programmed regardless of Auto Edit feature.
- If the handsets each have the same phone number stored with a different name, each handset will display the name stored in its own phone book.
- If the unit does not receive Caller ID information, one of the following will be displayed:

Display	Meaning
Out of area	The caller dialed from an area which does not provide Caller ID service.
Private caller	The caller requested not to send his/her information.
Long distance	The caller made a long distance call.

- Depending on radio communications with the base unit, the handset may not display Caller ID information immediately after the first ring.
- If your unit is connected to a PBX which does not support Caller ID, you cannot access Caller ID service.
- Name display service may not be available in some areas. For further information, please contact your telephone company.
- If you subscribe to both Caller ID and Call Waiting with Caller ID service (CWID), when a second call is received on the same line while talking, a call waiting tone will be heard and the second caller's information will be displayed (p. 66). Contact your telephone company for details about availability in your area, and to verify that CWID service is activated on your telephone line.
- If both lines receive calls at the same time, each caller's information will be displayed alternately.

Using the Caller List

The unit can record information up to 50 different callers for both lines combined and store this information in the Caller List. Caller information is sorted by the most recent call to the oldest. When the 51st call is received, the information from the 1st call is deleted.

The unit will also tell you how many calls you missed while you were out or unavailable to answer the phone.

 
 


The handset display will show the number of calls you missed.

Press [▼] or [▲] to review calls logged in the Caller List.

- You can also press the soft key (**SEARCH**), then press the soft key (**CID**=Caller Identification) to enter the Caller List.
- After viewing the missed call entries, "missed calls" will disappear from the display.

Viewing the Caller List **Handset**

<p>1 Press [▼] or [▲] to enter the Caller List.</p>	<p>Ex. 10 calls missed.</p>  <p>A simulated handset display showing the text "Caller list" at the top, "10 missed calls" in the middle, and "▼▲=Scroll list" at the bottom.</p>
<p>2 To search from the most recent call, press [▼]. To search from the oldest call, press [▲].</p> <ul style="list-style-type: none">• The caller's name and number, the called line (1 or 2) and the time and date of the call are displayed.	<p>Example</p>  <p>A simulated handset display showing the caller's name "SMITH, JACK" at the top, the phone number "1-555-333-4444" in the middle, and the time and date "3:10P JUN.10" at the bottom. A small square icon with the number "1" is next to the phone number.</p>
<p>3 Press [OFF] to exit the list.</p>	

- If there is no name information for a caller and you do not store the name and phone number in the phone book, the display will only show the phone number.
- Each handset has its own Caller List. If you viewed the Caller List or answered a call on one handset, the same information in the other handsets will be displayed as "missed".
- If you do not press any buttons for 60 seconds, the unit will exit the Caller List.

Using the Caller List

What “1” and “2” mean

Indication of which line the caller information was received from.

SMITH, JACK
1-555-333-4444 1
3:10P JUN.10

What “✓” means

“✓” indicates you have already viewed this calling information or answered the call. If the same caller calls again, the call entry with the “✓” will be replaced with the new call entry.

SMITH, JACK
1-555-333-4444 1
3:10P JUN.10 ✓

If a caller calls more than once

The number of times the same caller called is displayed (“x2” to “x9”). The date and time of the most recent call will be recorded. After viewing a caller’s information, “x2” to “x9” will be replaced with “✓”.

Ex. Called 3 times.

TURNER, CINDY
1-555-456-7890 2
11:20A JAN.12 x3

Calling Back from the Caller List **Handset**

1 Press [▼] or [▲] to enter the Caller List.

2 Scroll to the desired caller by pressing [▼] or [▲].

3 Press [↶] or [↷].

OR

Press the soft key (**CALL**), then press a line soft key (**LINE1**) or (**LINE2**).

- If the line selection is “Auto” (p. 69) and you press [↶] or [↷], the indicated line will be selected. If the indicated line is already being used, press the soft key (**CALL**), then select the other line by pressing the line soft key (**LINE1**) or (**LINE2**).
- The phone number is dialed.

• In some cases, you may have to edit the number before dialing (p. 44).

(Ex. You may have to delete “1” and the area code.)

• If a phone number is not displayed in the caller information, you cannot call that caller back from the Caller List.

Using the Caller List

Editing the Caller's Phone Number **Handset**

 
You can edit a phone number in the Caller List by removing its area code and/or the long distance code "1".

Once you call back an edited number, this unit can automatically edit incoming phone numbers from the same area code in the Caller List and each time you receive a call (**Caller ID Number Auto Edit**, p. 45).

You can also edit a phone number to store it in the phone book (p. 46).

1 Press [▼] or [▲] to enter the Caller List.

2 Scroll to the desired caller by pressing [▼] or [▲].



PARKER, FRED
1-555-321-5555 1


3 Press the soft key (**CALL**).

4 Press the soft key (**EDIT**) repeatedly until the number is shown in the desired format.

- Each time you press the soft key (**EDIT**), the number is rearranged into one of 3 patterns.

- Ⓐ Phone no.
- Ⓑ Area code – Phone no.
- Ⓒ 1– Area code – Phone no.

- The order in which patterns Ⓐ–Ⓒ are displayed depends on how the telephone number is displayed in step 2.

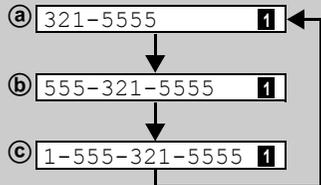

5 To call the edited number, press [↶], [↷], or a line soft key (**LINE1**) or (**LINE2**).

- If the line selection is "Auto" (p. 69), the indicated line will be selected by pressing [↶] or [↷]. If the indicated line is already being used, select the other line by pressing the line soft key (**LINE1**) or (**LINE2**).
- If Caller ID Number Auto Edit feature is turned on (factory preset is on), phone numbers with the same area code as the number you edited will now be updated in the Caller List and each time you receive a call.
- You can press **[OFF]** immediately after pressing [↶], [↷], or the line soft key (**LINE1**) or (**LINE2**) if you wish to activate the Auto Edit feature without actually dialing the number you just edited.

Using the Caller List

Caller ID Number Auto Edit **Handset**

Once you call back an edited number (p. 44), this unit can automatically edit incoming phone numbers from the same area code in the Caller List and each time you receive a call. For example, it can ignore the area code of calls originating from your area code, so that you can call these numbers from the Caller List without dialing the area code.

To activate this feature, you must edit a caller's phone number in the Caller List (p. 44) by selecting pattern **(a)**, **(b)**, or **(c)**, then make a call to that number. Calls from numbers in that area code will be edited automatically. The unit can remember up to 4 area codes to be edited according to patterns **(a)** and **(b)**.

When the 5th area code is edited, the oldest area code is reset to pattern **(c)**.

Phone numbers from the 4 most recently edited area codes will be automatically edited.

You can turn this feature on or off using the handset. The factory preset is ON.

To turn on or off Caller ID Number Auto Edit feature

1 Press **[MENU]**.

2 Scroll to "Initial setting" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Initial setting

3 Scroll to "Caller ID edit" by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Caller ID edit

4 Select "off" or "on" by pressing **[▼]** or **[▲]**.

Auto edit
:On

5 Press the soft key **(SAVE)**, then press **[OFF]**.

- If you fail to reach your destination when making a call, the phone number you dialed might have an incorrect pattern. Edit the phone number with another pattern (p. 44).
- When this feature is turned off, the unit will still be able to display Caller ID, but incoming Caller ID numbers will not be automatically edited.
- If you move to another area you may need to turn this feature off to erase the previously edited area codes. To use this feature again, turn it on and reprogram the area codes you want to be edited once again.

Using the Caller List

Storing Caller Information in the Phone Book **Handset**

Caller names and phone numbers that are in the Caller List can be stored in the phone book.

-
- 1 Press [▼] or [▲] to enter the Caller List.
 - 2 Scroll to the desired caller by pressing [▼] or [▲].
 - 3 Press the soft key (**SAVE**).
 - To edit the phone number, press the soft key (**EDIT**) repeatedly until the number is shown in the desired format (p. 44, step 4).
 - 4 Press the soft key (**SAVE**) again.
 - If there is no name information for the caller, “Enter name” will be displayed.
 - You can enter a name by performing the following steps:
 - (1) enter the name (p. 48),
 - (2) press [▼], and
 - (3) press the soft key (**SAVE**).
 - If a name is not required, press [▼], then press the soft key (**SAVE**).
 - To continue storing other items, repeat from step 2.
 - To exit the Caller List, press **[OFF]**.
-
- You cannot store Caller List items in the phone book if a phone number is not displayed.
 - Even if the Caller ID Number Auto Edit feature is turned on, phone numbers in the Caller List and the phone book will not be updated by storing an edited number in the phone book (p. 44, 45).

Erasing Caller Information **Handset**

To erase a specific caller

- 1 Press [▼] or [▲] to enter the Caller List.
 - 2 Scroll to the desired caller by pressing [▼] or [▲].
 - 3 Press the soft key (**ERASE**).
 - “Erased” is displayed.
 - To erase other items, repeat from step 2.
 - To exit the Caller List, press **[OFF]**.
-

To erase all entries

- 1 Press [▼] or [▲] to enter the Caller List.
 - Before erasing all entries, make sure that “0 missed call” is displayed.
 - 2 Press the soft key (**ERASE**).
 - “All erase?” is displayed.
 - To cancel erasing, press the soft key (**NO**).
 - 3 Press the soft key (**YES**).
 - “All erased” is displayed and all entries in your Caller List are erased.
-

 
Phone Book

The handset can store up to 50 names and phone numbers in its phone book. You can make a call by selecting a name or number from the phone book, and copy phone book items from one handset to another (p. 52, 53).

Storing Names and Numbers **Handset**

1 Press the soft key (**SEARCH**), then press the soft key (☞).

- The display will show the number of stored items.




Phone book
10 items
0-9=Name search
▼▲=Scroll list

2 Press the soft key (**ADD**).

3 Enter a name of up to 16 characters with the dialing buttons ([0] to [9]) (p. 48), then press [▼].

 - To move the cursor, press the soft key (◀) or (▶).
- If a name is not required, press [▼] then go to step 4.



Enter name
Tom
▼=Next

4 Enter a phone number of up to 32 digits.

 
- To delete a digit, press the soft key (**CLEAR**).
- To erase all of the digits, press and hold the soft key (**CLEAR**).



Enter phone no.
5557654321
▼=Next

5 Press [▼].

- If you want to change the name, press the soft key (**EDIT**). The display returns to step 3. Change the name.
- If you want to change the number, press [▲]. The display returns to step 4. Change the number.



Tom
555-765-4321

6 Press the soft key (**SAVE**).

- To continue storing other items, repeat from step 2.

7 Press [OFF].

- In step 1, you can also enter the phone book from the function menu:
(1) press [MENU], (2) scroll to "Phone book" by pressing [▼] or [▲], then (3) press the soft key (**SELECT**).
- If a pause is required when dialing, press [REDIAL/PAUSE] in step 4. A pause is stored in a phone number as one digit (p. 65).
- To store numbers for calling card access (see "Chain Dial" on page 50), we recommend you add pauses after each item. Storing pauses with numbers will prevent misdialing (p. 65). The delay time necessary will depend on your telephone company.

Phone Book

Selecting characters to enter names

Enter names using the dialing buttons. Press each button until the desired character is displayed.

- Pressing each button selects a character in the order shown below.

Keys	Characters	Keys	Characters
[1]	# & ' () * , - . / 1	[6]	m n o M N O 6
[2]	a b c A B C 2	[7]	p q r s P Q R S 7
[3]	d e f D E F 3	[8]	t u v T U V 8
[4]	g h i G H I 4	[9]	w x y z W X Y Z 9
[5]	j k l J K L 5	[0]	0 Space
	Moves the cursor to the left.		
	Moves the cursor to the right. (To enter another character using the same number key, move the cursor to the next space.)		

For example, to enter “Tom”:

1. Press [8] 4 times.

T

2. Press [6] 3 times, then press the soft key () to move the cursor.

To

3. Press [6] once.

Tom

If you make a mistake while entering a name

1. Press the soft key () or () to move the cursor to the incorrect character.
2. Press the soft key (**CLEAR**) to delete the character.
 - Each time you press the soft key (**CLEAR**), a character is erased.
 - To erase all characters, press and hold the soft key (**CLEAR**).
3. Enter the correct character.

Dialing from the Phone Book **Handset**

- 1 Press the soft key (**SEARCH**), then press the soft key ().
 - The display shows the number of stored items.
 - You can press the soft key (**SEARCH**) to view the first item.

Phone book
10 items
0-9=Name search
▼▲=Scroll list

- 2 Scroll to the desired item. To scroll down, press [▼]. To scroll up, press [▲].

Items are sorted in the following order:	
1	Alphabet letters (Alphabetical)
2	Space & ' () , - . /
3	Numbers 0 to 9
4	# *
5	Telephone numbers (If no name is stored)

Frank
555-456-7890

- 3 Press [↶] or [↷].

OR

Press the soft key (**CALL**), then press a line soft key (**LINE1**) or (**LINE2**).

- The phone number is dialed.

- In step 1, you can also enter the phone book from the function menu: (1) press [MENU], (2) scroll to "Phone book" by pressing [▼] or [▲], then (3) press the soft key (**SELECT**).
- If "No items stored" is displayed in step 1, the phone book is empty.
- To exit the phone book, press [OFF].

To search for a name by initial

1. Press the soft key (**SEARCH**), then press the soft key (📖).
2. Press the dialing button for the first letter of the desired name until any name with the same initial is displayed (see the Index table below).
Ex. To find "Frank", press [3] repeatedly until the first item under "F" is displayed.
 - If there are no items beginning with the character you selected, the first item in the next alphabetical index will be displayed.
3. Press [▼] repeatedly until the desired name is displayed.

Index table

Keys	Index	Keys	Index
[1]	Symbols, 1	[6]	M, N, O, 6
[2]	A, B, C, 2	[7]	P, Q, R, S, 7
[3]	D, E, F, 3	[8]	T, U, V, 8
[4]	G, H, I, 4	[9]	W, X, Y, Z, 9
[5]	J, K, L, 5	[0]	0, Space

Phone Book

Chain Dial **Handset**

You can dial a combination of phone book or manual key pad entries while making a call. This feature can be used, for example, to first automatically dial a calling card access number that you have stored in the phone book, then manually or automatically dial your PIN and then automatically dial the destination number from the phone book.

Ex. Using a long distance calling card

- To prevent misdialing, we recommend you add pauses where needed when storing numbers. For example, add pauses after a calling card access number and your PIN when storing in the phone book (p. 47).
1. Search and dial from the phone book: 1-800-012-3456 (Calling card access number)
 - The voice guidance may be announced.
 2. Search and dial from the phone book: 1234 (Calling card PIN)
 3. Search and dial from the phone book: 1-555-012-3456 (Destination Number)

1 While you are on a call; Press [MENU] .	1=Phone book 2=Privacy on 3=Booster on
2 Press the soft key (SELECT) at “1=Phone book”, or press [1] .	Phone book 30 items 0-9=Name search ▼▲=Scroll list
3 Search for the desired item by pressing [▼] or [▲] . <ul style="list-style-type: none">• To search for an item by initial, see page 49.	Alan 1-555-012-3456
4 Press the soft key (CALL). <ul style="list-style-type: none">• The phone number is dialed.• If required, repeat steps 1 to 4 for any remaining numbers.	

- If you have rotary or pulse service, you need to press **[*]** before pressing **[MENU]** in step 1 to change the dialing mode temporarily to tone.

Editing an Item in the Phone Book **Handset**

1 Press the soft key (**SEARCH**), then press the soft key (📖).

2 Scroll to the desired item by pressing [▼] or [▲].

- To search for the item by initial, see page 49.

3 Press the soft key (**EDIT**).

Enter name
Jane
▼=Next

4 Edit the name (p. 48), then press [▼].

- If you do not need to change the name, press [▼] then go to step 5.
- To move the cursor, press the soft key (◀) or (▶).

Enter name
Jane Walker
▼=Next

5 Edit the phone number, then press [▼].

- If you do not need to change the number, press [▼] then go to step 6.
- To delete a digit, press the soft key (**CLEAR**).
- To delete all of the digits, press and hold the soft key (**CLEAR**).

Enter phone no.
5554567890
▼=Next

6 Press the soft key (**SAVE**).

- To continue editing other items, repeat from step 2.

7 Press [OFF].

Erasing an Item in the Phone Book **Handset**

1 Press the soft key (**SEARCH**), then press the soft key (📖).

2 Scroll to the desired item by pressing [▼] or [▲].

- To search for the item by initial, see page 49.

3 Press the soft key (**ERASE**).

- To cancel erasing, press the soft key (**NO**).

Erase?

4 Press the soft key (**YES**).

- To erase other items, repeat from step 2.

Erased

5 Press [OFF].

Phone Book

Copying Items in the Phone Book **Handset** (When the System Has 2 or More Handsets)

You can copy 1 or all phone book items between 2 handsets. The destination handset will save the items in its phone book.

- If an outside call is received during the phone book copy, copying will stop. You will need to re-send the item(s) later.
- After the copy has started, do not place your handset on the base unit or charger (for KX-TG6502 or accessory handset users, p. 3) until copying finishes, otherwise copying will stop.

To copy one phone book item to another handset

Make sure the destination handset is not in use.

1 Press [MENU] .	
2 Scroll to “Copy phone book” by pressing [▼] or [▲] , then press the soft key (SELECT).	Copy phone book
3 Press the soft key (SELECT) at “Copy 1 item”.	Copy 1 item
4 Select the destination extension number (1 to 4) by pressing [▼] or [▲] . <ul style="list-style-type: none">• You can also select the extension number by pressing [1] to [4].	Enter extension# :2 ▼▲
5 Press the soft key (NEXT).	Select item
6 Scroll to the desired phone book item by pressing [▼] or [▲] . <ul style="list-style-type: none">• To search for the item by initial, see page 49.	
7 Press the soft key (SEND). <ul style="list-style-type: none">• When the item has been copied, a long beep sounds and “Complete” is displayed.• The destination handset displays “Phone book Receiving” then “Phone book Received”.• To continue copying other items, repeat from step 6.	Complete
8 Press [OFF] .	

To copy all of the items in your phone book to another handset

Make sure the destination handset is not in use.

<p>1 Press [MENU].</p>	
<p>2 Scroll to “Copy phone book” by pressing [▼] or [▲], then press the soft key (SELECT).</p>	<div style="border: 1px solid black; padding: 5px; text-align: center;">Copy phone book</div>
<p>3 Scroll to “Copy all items” by pressing [▼] or [▲], then press the soft key (SELECT).</p>	<div style="border: 1px solid black; padding: 5px; text-align: center;">Copy all items</div>
<p>4 Select the destination extension number (1 to 4) by pressing [▼] or [▲].</p> <ul style="list-style-type: none"> • You can also select the extension number by pressing [1] to [4]. 	<div style="border: 1px solid black; padding: 5px;"> <p>Enter extension#</p> <p>:2</p> <p>▼▲</p> </div>
<p>5 Press the soft key (SEND).</p> <ul style="list-style-type: none"> • When all items have been copied, a long beep sounds and “Complete” is displayed. • The destination handset displays “Phone book Receiving” then “Phone book Received”. • To continue copying items to another extension, repeat from step 3. 	<p>Ex. Copying 1st item out of 10 items</p> <div style="border: 1px solid black; padding: 5px;"> <p>Tom Jones</p> <p>555-765-4321</p> <p>01/10</p> </div>
<p>6 Press [OFF].</p>	

- You can exit phone book copying mode by pressing **[OFF]**.


Speed Dialer

Storing Phone Numbers **Base Unit**

You can store up to 10 phone numbers in the base unit. The dialing buttons ([0] to [9]) function as memory stations.

Make sure the base unit is not being used.

- 1 Press **[PROGRAM]**.
 - The IN USE indicator flashes and “尸” is displayed.
- 2 Enter a phone number of up to 32 digits.
 - The last digit of the entered number is displayed.
 - If you misdial, press **[PROGRAM]**, and start again from step 1.
- 3 Press **[AUTO]**.
- 4 Press a memory station number (**[0]** to **[9]**).
 - A long beep sounds and the phone number is saved.
 - To store other numbers, repeat from step 1.

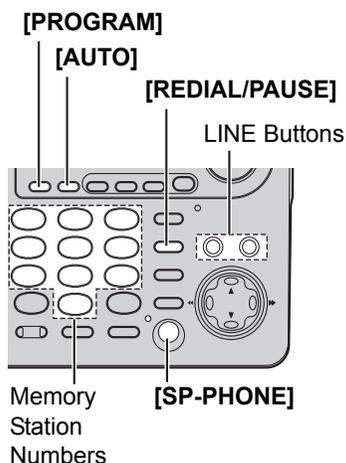

- If a pause is required when dialing, press **[REDIAL/PAUSE]** where needed. “尸” is displayed when **[REDIAL/PAUSE]** is pressed. A pause counts as one digit (p. 65).
- When **[*]** is pressed, “*” is displayed. When **#[#]** is pressed, “#” is displayed.
- If a phone number is stored in a memory location which already contains a phone number, the old number will be erased.
- We recommend you make a note of which phone numbers are stored in which memory locations.

To erase a stored number

1. Press **[PROGRAM]**, then press **[AUTO]**.
2. Press the memory station number (**[0]** to **[9]**) for the phone number to be erased.
 - A long beep sounds and the phone number is erased.

Dialing a Stored Phone Number **Base Unit**

- 1 Press **[SP-PHONE]** or a line button.
 - 2 Press **[AUTO]**.
 - 3 Press a memory station number (**[0]** to **[9]**).
 - The stored number is dialed.
- Speed dial numbers stored in the base unit can only be dialed from the base unit.

Intercom

Intercom calls can be made between a handset and the base unit, and between 2 handsets (when the system has 2 or more handsets, p. 3). You can page all handsets at once from the base unit, and announce the page to all handsets (**Voice Paging**, p. 57).

Page the desired unit(s) by entering the extension number, shown in the top right of each handset's display. The base unit's extension number is 0.

Making Intercom Calls

From **Handset**

<p>1 Press [HOLD/INTERCOM].</p>	<div style="border: 1px solid black; padding: 5px;"> Press extension# to call 1-4=Handset 0=Base </div>
<p>2 To page the base unit, press [0]. To page another handset, press its extension number ([1] to [4]).</p> <ul style="list-style-type: none"> • The paged unit will ring for 1 minute. • To stop paging, press [OFF]. 	<div style="border: 1px solid black; padding: 5px;"> Ex. Calling Base unit <div style="border: 1px solid black; padding: 2px; text-align: center;">Calling Base</div> Ex. Calling Handset 2 <div style="border: 1px solid black; padding: 2px; text-align: center;">Calling HS[2]</div> </div>
<p>3 When the paged party answers, start talking.</p> <ul style="list-style-type: none"> • You can switch to the speaker by pressing [⇄]. To switch back to the receiver, press [↶]. 	<div style="border: 1px solid black; padding: 5px;"> Ex. Intercom between Handset 1 & Base unit <div style="border: 1px solid black; padding: 2px;"> Intercom 00-00-05 ■01 </div> </div>
<p>4 To disconnect the intercom, press [OFF].</p>	

From **Base Unit**

Using this feature, you can also locate a misplaced handset.

<p>1 Press [LOCATOR/INTERCOM/TRANSFER].</p> <ul style="list-style-type: none"> • The LOCATOR/INTERCOM/TRANSFER and SP-PHONE indicators light.
<p>2 To page all handsets, press [0]. To page a specified handset, press its extension number [1] (<i>/</i>) to [4] (<i>/</i>).</p> <ul style="list-style-type: none"> • The handset(s) will ring for 1 minute. • To stop paging, press [SP-PHONE] or [LOCATOR/INTERCOM/TRANSFER].
<p>3 When the paged party answers, talk into the MIC.</p>
<p>4 To disconnect the intercom, press [SP-PHONE] or [LOCATOR/INTERCOM/TRANSFER].</p> <ul style="list-style-type: none"> • The indicator lights go out.

Intercom

During an intercom call:

- If you have difficulty hearing while using the speakerphone on the handset or base unit, decrease the speaker volume by pressing [▼].
- If an incoming call is being received, you will hear 2 tones (incoming call tone, p. 68) and the line button on the base unit will flash rapidly.
To answer the call;
 - if using the handset, press the called line soft key (**LINE1**) or (**LINE2**).
 - if using the base unit, press the called line button.

Answering Intercom Calls

Handset

When a handset is paged, it rings and the Ringer/Message Alert indicator flashes rapidly. The display shows the calling extension.

1 Press [↶], [📞] or [HOLD/INTERCOM].

- You can also answer a page by pressing any button except [▼], [▲] or [OFF].

Ex. Base calling

Call from Base

Ex. Handset 2 calling

Call from HS[2]

2 To disconnect the intercom, press [OFF].

- If the Auto Talk feature is turned on (p. 23), you can also answer a page by simply lifting the handset off the base unit or charger (for KX-TG6502 or accessory handset users, p. 3).

Base Unit

When the base unit is being paged, it rings and the LOCATOR/INTERCOM/TRANSFER indicator flashes.

1 Press [SP-PHONE] or [LOCATOR/INTERCOM/TRANSFER].

2 To disconnect the intercom, press [SP-PHONE] or [LOCATOR/INTERCOM/TRANSFER].

- The ringer volume for intercom calls follows the higher level of the 2 lines. When the ringer volume is turned off for both lines (p. 24, 25), the handset and the base unit will ring at the low level for intercom calls.
- You cannot change the ringer tone for intercom calls.
- When the base unit user pages all handsets, only the handset user who answers first can talk with the base unit user.

Voice Paging **Base Unit**

The base unit user can make a voice announcement that is heard through the speakers of all handsets.

- When 4 handsets are registered to the base unit, and if one handset user is on conversation using the Booster feature, one of the remaining 3 handsets will not receive the voice announcement.

1 Press **[LOCATOR/INTERCOM/TRANSFER]**.

- The LOCATOR/INTERCOM/TRANSFER and SP-PHONE indicators light.

2 To make a voice announcement to all handsets, press **[5]** ()

- You will hear a ringback tone (2 short beeps) and the SP-PHONE indicator flashes.

3 When the SP-PHONE indicator stops flashing, speak into the **MIC**.

- All handset users will hear your voice through their speakers after beeps, “Call from Base” will be displayed and the Ringer/Message Alert indicator will flash rapidly on the handsets.
- The handset on the base unit will not be paged.

4 When finished, press **[SP-PHONE]** or **[LOCATOR/INTERCOM/TRANSFER]**.

OR

After one of the handsets answers, talk into the **MIC**.

To disconnect the intercom, press **[SP-PHONE]** or **[LOCATOR/INTERCOM/TRANSFER]**.

-
- Only the handset user who answers first can talk with the base unit user.
 - To answer the page from the handsets, see “Answering Intercom Calls” on page 56.
 - If a handset is too close to the base unit, you may hear feedback while making the voice announcement. Place the handset on the base unit or charger (for KX-TG6502 or accessory handset users, p. 3) or press **[OFF]**.
 - It is not possible to specify which handset(s) will hear the voice announcement.
 - The speaker volume for the announcement follows the higher ringer volume level of 2 lines on the handset (p. 24).

Transferring a Call

You can transfer an outside call to the base unit or a handset.

From the **Handset** to the **Base Unit**

1 Handset:

(1) During a call, press **[HOLD/INTERCOM]**.

- “**LINE1**” or “**LINE2**” flashes and the call is put on hold.

Ex. LINE 1 on hold.

```
Press extension#  
to transfer  
1-4=Handset  
0=Base 9=Mailbox  
LINE1 LINE2
```

(2) To page the base unit, press **[0]**.

(3) Wait for the paged party to answer, then you can announce the transfer.

- If the paged party does not answer, press the line soft key (**LINE1**) or (**LINE2**) that is flashing to return to the outside call.

2 Base unit: Press **[SP-PHONE]** or **[LOCATOR/INTERCOM/TRANSFER]** to answer the page.

3 Handset: To complete the transfer, press **[OFF]**.

From the **Base Unit** to the **Handset**

1 Base unit:

(1) During a call, press **[LOCATOR/INTERCOM/TRANSFER]**.

- The line button flashes and the call is put on hold.

(2) To page a specified handset, press its extension number **[1]** (**/**) to **[4]** (**/**).

To page all handsets, press **[0]**.

Wait for the handset user to answer, then you can announce the transfer.

OR

To make a voice announcement to all handsets, press **[5]** (**/PAGE**), then speak into the **MIC** when the SP-PHONE indicator stops flashing.

- If the paged party does not answer, press the line button that is flashing to return to the outside call.

2 Handset: Press **[↶]**, **[↷]**, or **[HOLD/INTERCOM]** to answer the page.

- You can also answer a page by pressing any button except **[▼]**, **[▲]** or **[OFF]**.

3 Base unit: To complete the transfer, press **[SP-PHONE]**.

- When the base unit user calls all handsets, only the handset user who answers first can take the transferred call.

Transferring a Call

From a **Handset** to another **Handset**

(when the system has 2 or more handsets)

- 1 During a call, press **[HOLD/INTERCOM]**, then page another handset by pressing its extension number (**[1]** to **[4]**).

Ex. LINE 1 on hold.

```
Press extension#  
to transfer  
1-4=Handset  
0=Base 9=Mailbox  
LINE1 LINE2
```

- 2 Wait for the paged party to answer, then you can announce the transfer.
 - The paged handset user can answer by pressing **[↶]**, **[↷]** or **[HOLD/INTERCOM]**. (Any button except **[▼]**, **[▲]** or **[OFF]** can be pressed to answer the page.)
 - If the paged party does not answer, press the line soft key (**LINE1**) or (**LINE2**) that is flashing to return to the outside call.

- 3 To complete the transfer, press **[OFF]**.

- If the Auto Talk feature is turned on (p. 23), the paged handset user can also answer a page by simply lifting the handset off the base unit or charger (for KX-TG6502 or accessory handset users, p. 3).
- Any user can answer a transferred call:
 - for the handset, press the line soft key (**LINE1**) or (**LINE2**).
 - for the base unit, press the line button.
- If you call an extension in step 1, and the extension is in use, the handset display will show “**Busy**” then “**Hold**”, or busy tones will be heard from the base unit. Press the line soft key (**LINE1**) or (**LINE2**) that is flashing or the line button that is flashing to return to the outside call.

To transfer the call to another extension, repeat from step 1.

OR

To transfer the call to the Answering System to allow the caller to leave a message, perform the following steps:

- (1) Press **[HOLD/INTERCOM]** on the handset or **[LOCATOR/INTERCOM/TRANSFER]** on the base unit.
- (2) Press **[9]** to transfer the caller to the Answering System greeting (p. 79).
(The caller will hear the greeting and can leave a message after the beep.)

Transferring a Call

Quick call transfer

You can transfer a call without waiting for the paged party to answer.

Handset

1. During a call, press **[HOLD/INTERCOM]**.
2. Press the extension number (**[0]** for the base unit, **[1]** to **[4]** for the handset).
3. Press **[OFF]** to hang up.

Base Unit

1. During a call, press **[LOCATOR/INTERCOM/TRANSFER]**.
2. Press the extension number **[1]** (/) to **[4]** (/), or press **[0]** to page all handsets.
3. Press **[SP-PHONE]** to hang up.

- The call will be transferred directly.
- The paged party can answer the transferred call:
 - for the handset, press **[↶]**, **[↷]**, or the line soft key (**LINE1**) or (**LINE2**).
 - for the base unit, press **[SP-PHONE]** or the line button.
- After the paged party answers, the transfer is complete.
- If the paged party does not answer:
 - for the handset, press the line soft key (**LINE1**) or (**LINE2**) to return to the outside call.
 - for the base unit, press the line button that is flashing to return to the outside call.
- If the paged party does not answer within 60 seconds after you hang up, your phone will ring and the call will be returned to your phone. You may speak to the caller again by pressing the line soft key (**LINE1**) or (**LINE2**) on the handset, or the line button on the base unit.

If you do not answer the call within 4 minutes, the call will be disconnected.

After speaking to the caller, you may also **transfer the caller to the Answering System** by performing the following steps:

- (1) Press **[HOLD/INTERCOM]** on the handset or **[LOCATOR/INTERCOM/TRANSFER]** on the base unit.
- (2) Press **[9]** to transfer the caller to the Answering System greeting (p. 79).
(The caller will hear the greeting and can leave a message after the beep.)

Conference Calls

Conference call with 2 outside calls

While you are talking with an outside caller, you can make or answer a second call on the other line, and then combine the calls to establish a conference call.

Handset

- 1 During a call, press **[HOLD/INTERCOM]** 2 times to put the first call on hold.
 - 2 To make or answer a second call, select the other line by pressing the line soft key (**LINE1**) or (**LINE2**).
 - 3 When the second call is connected, press the soft key (**CONF**) on your unit to make a conference call.
- **To hang up both lines**, press **[OFF]**.
 - **To hang up only one line**, press the line soft key (**LINE1**) or (**LINE2**) for the party with which you want to continue talking.
 - **To put both lines on hold**, press **[HOLD/INTERCOM]**.
To talk with only one caller, press the line soft key (**LINE1**) or (**LINE2**) for the party with which you want to continue talking. To resume both lines, press the soft key (**CONF**).

- You cannot call another extension to make a conference call.
To join the conference call from other extensions, press either line soft key (**LINE1**) or (**LINE2**) on the handset or either line button on the base unit. One more extension can join the conference call if all other extensions are not being used.

Base Unit

- 1 During a call, press **[HOLD]** to put the first call on hold.
 - 2 Press the other line button to make or answer a second call.
 - 3 When the second call is connected, press **[CONF]** on your unit to make a conference call.
- **To hang up both lines**, press **[SP-PHONE]**.
 - **To hang up only one line**, press the line button for the party with which you want to continue talking.
 - **To put both lines on hold**, press **[HOLD]**. To talk with only one caller, press the line button. To resume both lines, press **[CONF]**.

Conference Calls

Conference with an outside call and an intercom call

While you are talking with an outside caller, another user can join the conversation using the handset or the base unit and establish a conference call.

Handset

- 1 During a call, press **[HOLD/INTERCOM]**.
 - The call is put on hold.
- 2 To page the base unit, press **[0]**.
To page another handset, press the extension number **([1] to [4])**.
- 3 When the paged party answers, press the soft key **(CONF)** on your unit to make a conference call.

Base Unit

- 1 During a call, press **[LOCATOR/INTERCOM/TRANSFER]**.
 - The call is put on hold.
- 2 To page a handset, press the extension number **[1] (/) to [4] (/)**.
- 3 When the paged party answers, press **[CONF]** on your unit to make a conference call.

- To leave the conference, press **[OFF]** on the handset or press **[SP-PHONE]** on the base unit. The 2 other parties can continue the conversation.
- During a conference, the outside call can be placed on hold by pressing **[HOLD/INTERCOM]** on the handset or **[HOLD]** on the base unit.
Internal communications between extensions are not suspended. Only the person who placed the call on hold can resume the full conference by pressing the soft key **(CONF)** on the handset or **[CONF]** on the base unit.
- One more extension can join the conference call. To join the conference call, press the line soft key **(LINE1)** or **(LINE2)** on the handset, or the line button on the base unit. A maximum of 4 parties including the outside party can take part in a conference call if all other extensions are not being used.

Call Share

This feature allows the base unit or the handset to join an existing outside call.

- To prevent other users from joining your conversation, turn the Call Privacy feature on (p. 65).
- A maximum of 4 parties including 1 or 2 outside parties can join a conversation if all other extensions are not being used.

To join a conversation (Call Share)

Handset Press the line soft key **(LINE1)** or **(LINE2)**.

- “Conference” is displayed.

Base Unit Press the line button.

Room Monitor

This feature allows you to monitor a room by using the intercom feature. For example, you can monitor a baby from different areas of the house. You can call the destination unit to monitor the room. The called unit will not ring. When the system has 2 or more handsets (p. 3), you can monitor 1 handset using another. To allow other users to monitor through your unit, turn this feature on. If you want to prevent your unit from being monitored by other extensions, leave this feature off. Using the handset, this feature can be turned on or off separately for the handset and base unit. The factory preset is OFF.

To turn Room Monitor on for the handset **Handset** (to allow other users to monitor through your handset)

1 Press **[MENU]**.

2 Scroll to “**Initial setting**” by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Initial setting

3 Scroll to “**Room monitor**” by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Room monitor

4 Select “On” by pressing **[▼]** or **[▲]**.

Room monitor
:On

5 Press the soft key (**SAVE**), then press **[OFF]**.

- To prevent your handset from being monitored, select “**off**” in step 4.

To turn Room Monitor on for the base unit **Handset** (to allow other users to monitor through your base unit)

1 Follow steps 1 and 2 of “To turn Room Monitor on for the handset” above.

2 Scroll to “**Set base unit**” by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Set base unit

3 Scroll to “**Room monitor**” by pressing **[▼]** or **[▲]**, then press the soft key (**SELECT**).

Room monitor

4 Select “On” by pressing **[▼]** or **[▲]**.

Room monitor
:On

5 Press the soft key (**SAVE**), then press **[OFF]**.

- To prevent your base unit from being monitored, select “**off**” in step 4.

Room Monitor

To monitor with **Handset**

The unit to be monitored must not be in use and the handset to be monitored must be off the base unit.

1 Press **[HOLD/INTERCOM]**, then press the soft key (**MONITOR**).

2 To call the base unit, press **[0]**.

To call another handset, press its extension number (**[1]** to **[4]**).

- To monitor from the speaker, press **[🔊]**. If the handset is placed on the base unit, monitoring will be stopped. You can place the handset on the charger and continue monitoring. To switch back to the receiver, press **[🔊]**.

```
Press extension#  
for room monitor  
1-4=Handset  
0=Base
```

```
Room monitor  
00-00-05  
■01
```

3 To end monitoring, press **[OFF]**.

- The monitored user can stop being monitored by:
 - on the handset, press **[OFF]** or place the handset on the base unit.
 - on the base unit, press **[LOCATOR/INTERCOM/TRANSFER]** or **[SP-PHONE]**.
- “Room monitor” is also displayed on the monitored handset.
- While the base unit is monitoring or being monitored, the LOCATOR/INTERCOM/TRANSFER indicator light flashes and the SP-PHONE indicator lights.
- If an incoming call is being received, you will hear 2 tones (incoming call tone, p. 68). To answer the call, press the called line soft key (**LINE1**) or (**LINE2**).

To monitor with **Base Unit**

The handset to be monitored must not be in use and off the base unit.

1 Press **[LOCATOR/INTERCOM/TRANSFER]**, then press **[MUTE]**.

- The SP-PHONE indicator lights and the LOCATOR/INTERCOM/TRANSFER indicator flashes.

2 To call the handset, press its extension number **[1]** (📞) to **[4]** (📞).

3 To end monitoring, press **[LOCATOR/INTERCOM/TRANSFER]** or **[SP-PHONE]**.

- The indicator lights go out.

- If the Room Monitor feature of the destination handset is off or the handset is on the base unit, busy tones will sound.
- If an incoming call is being received, you will hear 2 tones (incoming call tone, p. 68) and the line button will flash rapidly. To answer the call, press the called line button.

Special Features

Muting Your Conversation

During a call, you can mute your phone so the other party cannot listen to you. When muting your conversation, you can hear the other party.

Handset Press the soft key (**MUTE**).

- “Mute” will be displayed for a few seconds and “**MUTE**” will flash.
- **To release the mute**, press the soft key (**MUTE**) again.
- If you press [**↶**] or [**↷**] to switch between the receiver and speaker, the mute will be released.

Base Unit Press [**MUTE**].

- The SP-PHONE indicator flashes.
- **To release the mute**, press [**MUTE**] again or press [**SP-PHONE**].

Call Privacy **Handset**

Call Privacy allows you to prevent other users from joining your conversation with an outside caller. To allow other users to join your conversation, leave this feature off. This feature is only available for the handset.

To turn the Call Privacy feature on

1. Press [**MENU**] during an outside call.
2. Press [**2**] to select “2=Privacy on”.
 - “PRIVACY” is displayed when this feature is turned on.

1=Phone book
2=Privacy on
3=Booster on

To turn this feature off, press [**2**] to select “2=Privacy off” in step 2.

- In step 2, you can also select “2=Privacy on” or “2=Privacy off” by pressing [**▼**] or [**▲**] then pressing the soft key (**SELECT**).
- While the Call Privacy feature is turned on, other users cannot join the conversation.
- Call Privacy will turn off after you hang up the call.

Using the PAUSE Button (For PBX Line/Long Distance Calls)

Handset **Base Unit**

We recommend you press [**REDIAL/PAUSE**] if a pause is required for dialing with a PBX or to make a long distance call.

Ex. Line access number [**9**] (PBX)

[**9**] ➔ [**REDIAL/PAUSE**] ➔

- Pressing [**REDIAL/PAUSE**] once creates a 3.5 second pause. This prevents misdialing when you dial after confirming the entered number (p. 34) or dial a stored number (p. 48, 50, 54).
- Pressing [**REDIAL/PAUSE**] more than once increases the length of the pause between numbers.

Special Features

Temporary Tone Dialing

(For Rotary or Pulse Service Users) **Handset** **Base Unit**

Press [*] (TONE) before entering access numbers which require tone dialing.

- The dialing mode changes to tone. You can enter numbers to access an answering service, electronic banking service, etc. When you hang up, the dialing mode will return to pulse.

For Call Waiting Service Users

Handset **Base Unit**

If another call is received on the same line during a conversation, you will hear a call waiting tone. Press [FLASH/CALL WAIT] to answer the second call.

- The first call is put on hold.
- To return to the first caller, press [FLASH/CALL WAIT] again.
- Call Waiting service cannot be used when:
 - the first call on the same line is put on hold,
 - the Answering System is handling a call on the same line, or
 - you are having a conference call on both lines.
- If this function does not operate properly, consult your telephone company for details.

Call Waiting Caller ID display

Handset

If you subscribe to both Caller ID and Call Waiting with Caller ID services (CWID), when a second call is received on the same line while talking, the second caller's information will be displayed. After you hear a call waiting tone while talking, the display shows the caller's name with the phone number, "waiting" and the line.

BROWN, NANCY 1-555-666-7777 -Waiting--Line1-

- Contact your telephone company for details about availability in your area, and to verify that CWID service is activated on your telephone line.
- The caller's information will only be shown on the display of the handset which is on the outside call on the same line.

FLASH Button **Handset** **Base Unit**

Pressing **[FLASH/CALL WAIT]** allows you to use special features of your host PBX such as transferring an extension call, or accessing optional telephone services such as call waiting.

- Pressing **[FLASH/CALL WAIT]** cancels the mute (p. 65) or the Temporary Tone Dialing mode (p. 66).

Selecting the flash time **Handset**

The flash time depends on your telephone exchange or host PBX.

You can select the following flash times: “700, 600, 400, 300, 250, 110, 100 or 90 ms (milliseconds)”. Each line has its own setting. The factory preset for both lines is “700 ms”.

- The setting should stay at 700 ms unless pressing **[FLASH/CALL WAIT]** fails to pick up the Call Waiting call.
- If PBX functions do not work correctly, consult your PBX supplier for the correct settings.

1 Press [MENU] .	
2 Scroll to “ Initial setting ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Scroll to “ Set tel line ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Set tel line
4 Scroll to “ Set flash time ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Set flash time
5 Press [▼] (Line1) or [▲] (Line2) to select the line.	Set flash time ▼=Line1 ▲=Line2
6 Select the flash time by pressing [▼] or [▲] .	Set flash time Line1:700ms
7 Press the soft key (SAVE).	
• To select the other line, repeat from step 4.	
8 Press [OFF] .	

Special Features

Incoming Call Tone **Handset** **Base Unit**

During an outside call, you can be informed of another incoming call on the other line.

During an intercom call (p. 56) or while using the Room Monitor feature (p. 64), you can also be informed of incoming calls by 2 tones.

If this feature is turned on, incoming call tones will be heard for as long as the line is ringing. If this feature is set to “2”, incoming call tones will be heard only 2 times. If this feature is turned off, no tones will be heard. This factory preset is “2”.

Using the handset, this feature can be set separately for the handset and base unit.

Handset incoming call tone **Handset**

1 Press [MENU] .	
2 Scroll to “ Ringer setting ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Ringer setting
3 Scroll to “ Incoming call. ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Incoming call.
4 Select “ on ”, “ off ” or “ 2 ” by pressing [▼] or [▲] .	Incoming call tone :2
5 Press the soft key (SAVE), then press [OFF] .	

Base unit incoming call tone **Handset**

1 Press [MENU] .	
2 Scroll to “ Initial setting ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Scroll to “ Set base unit ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Set base unit
4 Scroll to “ Incoming call. ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Incoming call.
5 Select “ on ”, “ off ” or “ 2 ” by pressing [▼] or [▲] .	Incoming call tone :2
6 Press the soft key (SAVE), then press [OFF] .	

Line Selection

When you make or answer a call, the handset and base unit can automatically select the line when you press [] or [] on the handset or [SP-PHONE] on the base unit. There are 3 types of line selection. You can change the line selection for the handset and base unit separately. The factory preset is "Auto".

Auto (factory preset):

When making a call, LINE 1 will be selected. If that line is unavailable, LINE 2 will be selected. When answering a call, the ringing line will be selected.

- When you call back from the Caller List (p. 43), the indicated line will be selected.
- If the Auto Talk feature is turned on (p. 23), the unit will select the ringing line when you lift the handset off the base unit or charger (for KX-TG6502 or accessory handset users, p. 3), to answer the call.

Line 1: Line 1 will be selected.

Line 2: Line 2 will be selected.

You can select any line by pressing a line soft key (**LINE1**) or (**LINE2**) on the handset or a line button on the base unit, regardless of this setting.

Handset line selection **Handset**

1 Press [MENU].	
2 Scroll to "Initial setting" by pressing [▼] or [▲], then press the soft key (SELECT).	Initial setting
3 Scroll to "Set tel line" by pressing [▼] or [▲], then press the soft key (SELECT).	Set tel line
4 Press the soft key (SELECT) at "Line selection".	Line selection
5 Select "Line1", "Line2" or "Auto" by pressing [▼] or [▲].	Line selection :Auto
6 Press the soft key (SAVE), then press [OFF].	

Special Features

Base unit line selection **Handset**

1 Press [MENU] .	
2 Scroll to “ Initial setting ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Scroll to “ Set base unit ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Set base unit
4 Scroll to “ Line selection ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Line selection
5 Select “ Line1 ”, “ Line2 ” or “ Auto ” by pressing [▼] or [▲] .	Line selection :Auto
6 Press the soft key (SAVE), then press [OFF] .	

Key Tone **Handset**

You can select whether or not the handset keys will sound tones (key tone, confirmation tone, error tone). The factory preset is ON.

1 Press [MENU] .	
2 Scroll to “ Initial setting ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Scroll to “ Key tone ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Key tone
4 Select “ off ” or “ on ” by pressing [▼] or [▲] .	Key tone :On
5 Press the soft key (SAVE), then press [OFF] .	

Automatic Answering Operation

The Answering System allows the unit to answer calls with a greeting message. Callers can then leave a message. When turning the Answering System on, you can select the lines it will answer calls from.


- The total recording time of all messages (greeting, incoming and memo) is **about 60 minutes** (about 30 minutes in “Enhanced recording” mode, p. 32). If messages are recorded in noisy rooms, the time may be shortened by up to 3 minutes.
- To select the caller’s recording time, see page 30.
- A maximum of 99 messages (including the greeting and memo messages) can be recorded.

Setting the Unit to Answer Calls **Base Unit**

- 1 To turn on the Answering System for both lines, press **[LINE SELECT]** repeatedly until “LINE 1 and LINE 2” is announced.

To turn on the Answering System for either line, press **[LINE SELECT]** repeatedly until “LINE 1” or “LINE 2” is announced.

- The selected line(s) (**LINE 1** and/or **LINE 2**) will be displayed.

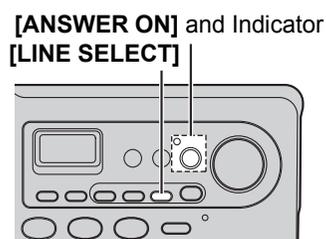

- 2 Press **[ANSWER ON]** to turn on the Answering System for the line(s).

- The indicator lights.
- The unit announces “Answer set” and the line(s), and the current day and time. If “Set time” is heard, set the date and time (p. 20).

- The number of caller messages and memo messages will be displayed on the base unit (p. 73). If the Answering System is turned on for only one of the 2 lines, the display shows the number of messages recorded for that line (not both lines) plus the number of memo messages. The number of messages continues to be displayed if the Answering System is turned off.
- The unit will announce the remaining recording time if it is less than 10 minutes.
- When no recording time is available, you will need to erase any unnecessary messages before new messages can be recorded (p. 77). The unit can indicate that memory is full in the following ways:
 - “**FULL**” will flash on the base unit and the ANSWER ON indicator will flash rapidly.
 - The unit will announce “Memory full” when you press **[ANSWER ON]**, **[GREETING REC]**, or **[MEMO]**, and after playing back messages or recording a message.
- You can also turn on the Answering System remotely from the handset (p. 76) or an outside phone (p. 83).
- If you subscribe to Caller ID (p. 41), Caller ID information automatically adjusts the date and time when a call is received, provided you have already set the date and time manually (p. 20).

Automatic Answering Operation

To turn off the Answering System

Press **[ANSWER ON]**.

- The indicator light goes out, and the unit announces “Answer off”.
- To turn the Answering System off for one line when both lines are turned on, select the line which you want to leave on by pressing **[LINE SELECT]**, then press **[ANSWER ON]**.

Monitoring Incoming Calls **Base Unit**

While a caller is leaving a message, you can monitor the call through the base unit speaker.

- To increase the speaker volume while monitoring, press **[▲]**. To decrease volume, press **[▼]**.
- If both lines are receiving calls at the same time, only the first call can be monitored.

To answer a call while monitoring, press the called line button on the base unit, or press the called line soft key (**LINE1**) or (**LINE2**) on the handset.

To turn the incoming call monitoring feature off

When the base unit is not in use, press **[▼]** repeatedly until “0” is displayed. (Make sure the Answering System is turned on.)

OR

While monitoring, press **[▼]** repeatedly until “0” is displayed.

- If the incoming call monitoring feature is turned off, it will remain off when the next call is monitored.
- If you adjust the speaker volume while playing back messages or using the speakerphone, the speaker volume for monitoring will be turned on again. To turn the speaker volume off, see “To turn the incoming call monitoring feature off” of above step.

Listening to Messages

Voice Day/Time Stamp: During playback, the unit will announce the day and time when each message was recorded (p. 20).

The unit will indicate that new messages have been recorded in the following ways:

- The NEW MESSAGE indicator flashes on the base unit.
- “New message” is displayed and “SEARCH” flashes on the handset.
- The Ringer/Message Alert indicator on the handset will flash slowly when new messages have been recorded if the Message Alert is turned on (p. 32) and the handset is not in use.

The total number of caller messages and memo messages is displayed on the base unit. If the Answering System is turned on for only one of the 2 lines, the display shows the number of messages recorded for that line (not both lines) plus the number of memo messages. The number of messages continues to be displayed if the Answering System is turned off.


Using the Base Unit **Base Unit**

To play back messages

Press **[MESSAGE]**.

- The unit announces the number of new messages. Only new messages are played back.
- When there are no new messages, the unit announces “No new messages. All message playback”, then plays back all messages.
- When there are no messages, the unit announces “No messages”.

NEW MESSAGE Indicator

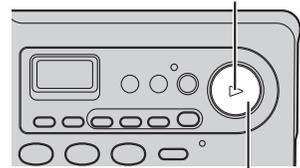

[MESSAGE]

To play back messages for the desired line(s)

1. Press **[LINE SELECT]** repeatedly until the unit announces the desired line(s).

- The selected line(s) (**LINE 1** and/or **LINE 2**) will be displayed.

Ex. 2 messages for LINE 1



2. Press **[MESSAGE]**.

- The unit announces the number of new messages for the line(s). Only new messages are played back. Memo messages are not played back.
 - When there are no new messages, the unit announces “No new messages. All message playback”, then plays back all messages.
 - When there are no messages, the unit announces “No messages”.
- While a message is being played, the message number is displayed, and the line (**LINE 1** or **LINE 2**) flashes on the base unit.
- At the end of the last message, “End of final message” is heard. The unit will announce the remaining recording time if it is less than 10 minutes.

Listening to Messages

- If a call is received during playback, the unit rings and playback stops. To answer the call, press the called line button. For playback, start again from the beginning after hanging up.
- If 65 or more new messages have been recorded, the unit will not announce the number of new messages during playback.

Using the Handset (Remote Operation) **Handset**

When "**SEARCH**" flashes and "New message" is displayed, new messages have been recorded. If there are only old messages, "**SEARCH**" is displayed but will not flash.

Ex. New messages exist.



To play back messages

1 Press the soft key (**SEARCH**).

- When there are new messages, "**PLAY**" flashes. If there are only old messages "**PLAY**" is displayed but will not flash.

Ex. New messages exist.



2 Press the soft key (**PLAY**).

- The unit beeps, then announces the number of new messages. Only new messages are played back.
- To switch from the speaker to the receiver, press [**↶**]. To switch back to the speaker, press [**↷**].
- When there are no new messages, the unit announces "No new messages. All message playback", then plays back all messages.
- When there are no messages, the unit announces "No messages".
- To play all messages, press [**5**].
- If you do not press any button, the voice menu will start (p. 75).



3 To end remote operation, press [**OFF**].

To play back messages from the function menu

Press [**MENU**], then press the soft key (**SELECT**) at "Message play", instead of pressing the soft key (**SEARCH**) then the soft key (**PLAY**).

Listening to Messages

To play back messages for the desired line(s)

1. Press the soft key (**SEARCH**), then press the soft key (**PLAY**).
2. To listen to messages for LINE 1, press **#[1]**.
To listen to messages for LINE 2, press **#[2]**.
To listen to messages for LINE 1 and LINE 2, press **#[0]**.
 - The unit announces the number of new messages for the line(s). Only new messages are played back. Memo messages are not played back.
 - When there are no new messages, the unit announces “No new messages. All message playback”, then plays back all messages.
 - When there are no messages, the unit announces “No messages”.
3. To end remote operation, press **[OFF]**.
 - If a call is received during playback, the unit rings and playback stops. To answer the call, press the called line soft key (**LINE1**) or (**LINE2**). For playback, start again from the beginning after hanging up.
 - At the end of the last message, “End of final message” is heard. The unit will announce the remaining recording time if it is less than 10 minutes.
 - If you hear “Memory full” after playback, erase unnecessary messages (p. 77).
 - When memo messages are played (p. 78), “MEMO” is displayed.
 - If 65 or more new messages have been recorded, the unit will not announce the number of new messages during playback.

Voice menu

If you do not press any buttons at the end of the last message, the unit will announce “End of final message” and the voice menu will begin.

The unit announces, “Press 4 to play back new messages. Press 5 to play back all messages.”

- Even if the voice menu has started;
 - you can press buttons for other playback options (p. 76), or
 - you can select the line(s) by pressing **#[1]** (LINE 1), **#[2]** (LINE 2) or **#[0]** (LINE 1 and LINE 2).
- If you do not press any button within 10 seconds after the voice menu, the handset will exit remote operation.

Listening to Messages

For Caller ID service users (p. 41)

During playback, the handset display shows the name and/or number of the caller whose message is being played.

To call the displayed number:

1. Press the soft key (**CALL**).
 - The unit stops playback.
 - If you need to edit the phone number to call back, see page 44.
2. Press the line soft key (**LINE1**) or (**LINE2**).
 - The unit dials the phone number.
 OR
 Press [] or [].
 - The unit dials the phone number using the called line.

To turn the Answering System on

1. During playback, select the desired line(s) by pressing **#[#][1]** (LINE 1), **#[#][2]** (LINE 2) or **#[#][0]** (LINE 1 and LINE 2).
 - If the Answering System is turned on for one line and you also want to turn on the system for the other line, select both lines.
2. To turn the system on for the line(s), press **[8]**.

To turn the Answering System off, press **[0]** during playback.

- To turn the Answering System off for one line when both lines are turned on, select the line which you want to leave on (see step 1 above), then press **[0]**.

During playback **Base Unit** **Handset**

To adjust the speaker volume	To increase, press [▲] . To decrease, press [▼] . <ul style="list-style-type: none"> • You can also adjust the receiver volume on the handset.
To repeat a message	<i>Base unit:</i> Press [◀◀] . <i>Handset:</i> Press the soft key (REPEAT) or [1] . <ul style="list-style-type: none"> • If pressed within the first 5 seconds of playback, the previous message will be played.
To skip a message	<i>Base unit:</i> Press [▶▶] . <i>Handset:</i> Press the soft key (SKIP) or [2] .
To stop playback	<i>Base unit:</i> Press [STOP] . <ul style="list-style-type: none"> • To resume playback, press [MESSAGE]. • If you do not press any button for 60 seconds or if you press [STOP] again, playback mode will be canceled. <i>Handset:</i> Press [9] . <ul style="list-style-type: none"> • If you do not press any button within 15 seconds after stopping playback, the voice menu will start (p. 75).

Erasing Messages

The unit will announce the remaining recording time after playback if it is less than 10 minutes. New messages cannot be recorded when:

- “Memory full” is heard.
 - “**FULL**” flashes on the base unit.
 - ANSWER ON indicator flashes rapidly (when the Answering System is on).
- Erase unnecessary messages. We recommend you erase unnecessary messages after each playback.

Erasing a specific message

Base Unit

Press **[ERASE]** while the message you want to erase is being played.

- A beep sounds, then the next message is played. To exit playback mode, press **[STOP]** 2 times.

Handset

Press **[*][4]** while the message you want to erase is being played.

- A beep sounds, then the next message is played. To exit remote operation mode, press **[OFF]**.

Erasing all messages

You can erase all caller messages and all memo messages in one operation.

- The greeting message(s) will not be erased.
- If the Answering System was turned on for only one of the 2 lines, only caller messages for that line and memo messages are erased. Caller messages recorded for the other line are not erased.

If you want to erase caller messages only for the desired line(s), select the line(s).

Base Unit

1 Press **[ERASE]** while the base unit is not being used.

- “To erase all messages, press ERASE again” is heard.

2 Within 10 seconds, press **[ERASE]** again. Wait until “No messages” is heard.

- While erasing messages, alarm tones will be heard.
 - All messages for the line(s) and memo messages are erased.
-

To erase all messages for the desired line(s)

1. Select the line(s) by pressing **[LINE SELECT]**.

2. Press **[ERASE]**.

3. Within 10 seconds, press **[ERASE]** again. Wait until “No messages” is heard.

- While erasing messages, alarm tones will be heard.
- All messages for the line(s) are erased. Memo messages are not erased.

Erasing Messages

Handset

- 1 Press the soft key (**SEARCH**), then press the soft key (**PLAY**).
 - 2 Press **[*][5]** to erase all messages. Wait until “No messages” is heard.
 - While erasing messages, alarm tones will be heard.
 - All messages for the line(s) and memo messages are erased.
 - To end remote operation, press **[OFF]**.
-
- Information in the Caller List will not be erased. To erase caller information, see page 46.

To erase all messages for the desired line(s)

1. Press the soft key (**SEARCH**), then press the soft key (**PLAY**).
2. Select the line(s) by pressing **#[1]** (LINE 1), **#[2]** (LINE 2) or **#[0]** (LINE 1 and LINE 2).
3. Press **[*][5]** to erase all messages for the line(s). Wait until “No messages” is heard.
 - While erasing messages, alarm tones will be heard.
 - All messages for the line(s) are erased. Memo messages are not erased.
 - To end remote operation, press **[OFF]**.

Recording a Memo Message

Base Unit

You can record a voice memo message of up to 3 minutes for other users or yourself.

- 1 Press **[MEMO]**.
 - 2 After the long beep, talk clearly 20 cm (8 inches) away from the **MIC**.
 - The base unit display shows the elapsed recording time.
 - If the elapsed recording time exceeds 99 seconds, the counter continues from 00 to indicate 100 seconds.
 - 3 When finished, press **[MEMO]** or **[STOP]**.
 - The NEW MESSAGE indicator flashes.
-
- If you record for over 3 minutes in step 2, the unit will stop recording.
 - If “E” is displayed, 6 beeps sound and “Your message was not recorded. Record your message again.” is announced, start again from step 1.

Transferring a Call to the Answering System

Base Unit Handset

When you answer a call and the caller wants to talk to someone who is not available, you can transfer the caller to the Answering System, where the caller can leave a message.

Tell the outside caller you will transfer him or her to the Answering System.

1 Base unit:

Press [**LOCATOR/INTERCOM/TRANSFER**] during a call.

Handset:

Press [**HOLD/INTERCOM**] during a call.

- The call is put on hold.

Handset display

```
Press extension#  
to transfer  
1-4=Handset  
0=Base 9=Mailbox
```

2 Press [**9**] to hang up the call.

After you press [**9**]:

The caller will hear the greeting (p. 28), then he or she can leave a message after the beep.

- Even if you subscribe to Caller ID (p. 41), Caller ID information will not be displayed while the message is being played. The Caller ID information will be recorded in the Caller List (p. 42) if the transferred call is an incoming call.
- If you set the caller's recording time to "Greeting only" (p. 30), the caller cannot leave a message.

Interrupting remote operation

If another user is calling from a remote location to operate the Answering System and you mistakenly answer the call, repeat steps 1 and 2 above.

- The user can then operate the Answering System, by entering the remote code (see "Remote Operation from a Touch Tone Phone" on page 80).


Remote Operation from a Touch Tone Phone

While outside, you can operate the Answering System from any touch tone phone. A synthesized voice menu will guide you through the Answering System (p. 82).

- To skip the voice menu and operate the unit directly, see page 83.



Summary of remote operation

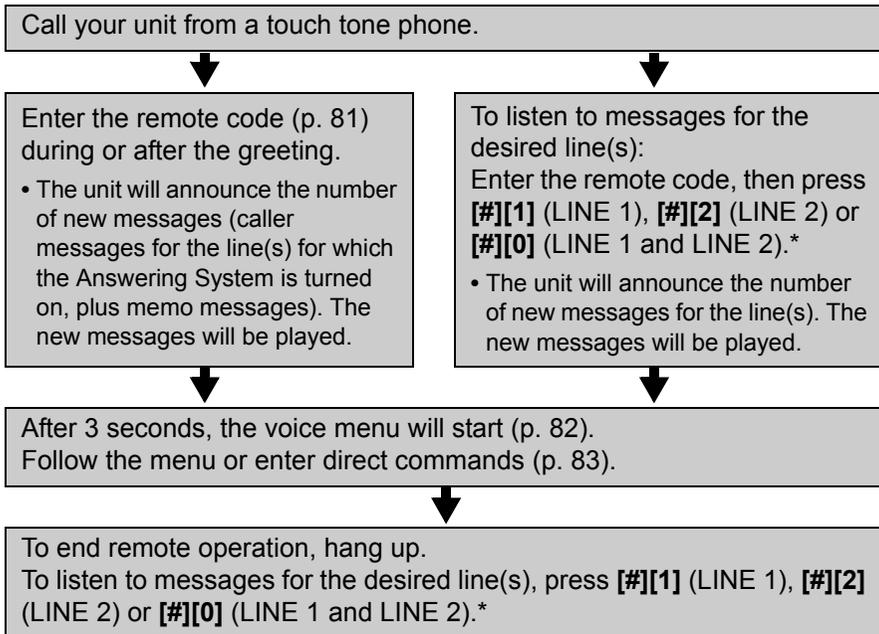

- The unit will announce the remaining recording time after playback if it is less than 10 minutes.
- The messages are saved.
- If the unit announces “No new messages”, there are only old messages. If “No messages” is announced, there are no messages.
- If 65 or more new messages have been recorded, the unit will not announce the number of new messages during playback.

*After selecting the line(s), messages for the line(s) will be played. Memo messages will not be played.

Remote Operation from a Touch Tone Phone

Remote Code **Handset**

The remote code prevents unauthorized people from accessing your unit and listening to your messages. Choose any **2-digit number (00–99)** for your remote code.

The factory preset remote code is “11”. If you do not program your own remote code, you can use “11”.

1 Press [MENU] .	
2 Scroll to “ Initial setting ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Press the soft key (SELECT) at “ Set answering ”.	Set answering
4 Scroll to “ Remote code ” by pressing [▼] or [▲] , then press the soft key (SELECT).	Remote code
5 Enter a 2-digit remote code (00–99) .	Ex. Entered 35. Remote code :35
6 Press the soft key (SAVE).	
7 Press [OFF] .	


To confirm the remote code, repeat steps 1 to 4.

- The remote code is displayed. When finished, press **[OFF]**.

Remote Operation from a Touch Tone Phone

Voice Menu

The shaded parts are voice prompts.

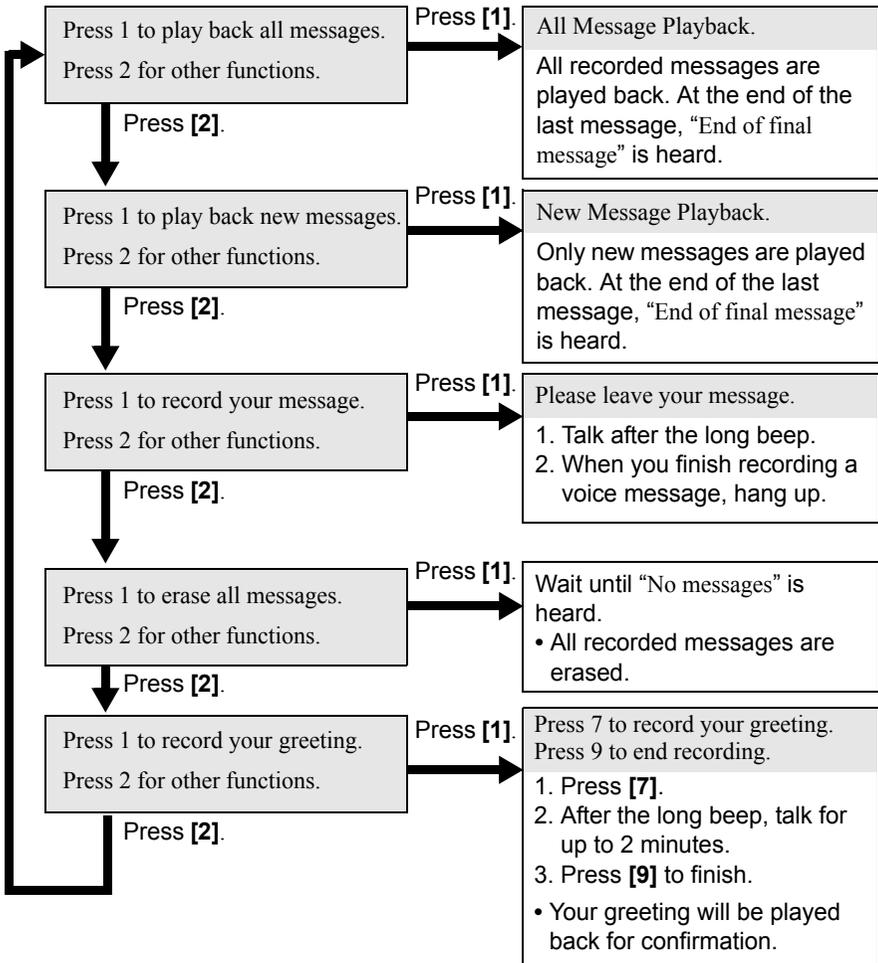

- 3 seconds after playback, the voice menu will start again from the beginning.
- The unit will announce the remaining recording time after playback if it is less than 10 minutes.
- If you hear "Memory full" after playback, erase unnecessary messages (p. 83).
- To listen to messages for the desired line(s), press **#[1]** (LINE 1), **#[2]** (LINE 2) or **#[0]** (LINE 1 and LINE 2). Memo messages will not be played.
If you erase all messages after selecting the line(s), all messages for the line(s) will be erased. Memo messages will not be erased.
- If you do not press any buttons within 10 seconds after a voice prompt, "Thank you for your call" will be heard and the call will be disconnected.

Remote Operation from a Touch Tone Phone

Direct Remote Operation

Once you have entered the remote code (p. 80), you can also control your unit by direct commands instead of using the voice menu. To end the remote operation, hang up at anytime.

Direct commands

[4]: Plays back new messages.

[5]: Plays back all messages.

[1]: Repeats the current message.

- If pressed within the first 5 seconds of playback, the previous message will be played.

[2]: Skips the current message.

[9]: Stops the current operation.

- To resume, enter a direct command within 15 seconds, or the voice menu will start (p. 82).

[7]: Records a greeting message.
After the long beep, talk for up to 2 minutes.



[9]: Recording is stopped.

- The greeting is played.

[0]: Turns off the Answering System.

[*] [4]: Erases the current message.

- A beep will sound and the next message will be played.

[*] [5]: Erases all messages. Wait until "No messages" is heard.

- To erase all messages for the desired line(s), select the line(s) (see below), then press [*][5]. Memo messages will not be erased.

[#] [1]: Selects LINE 1.

[#] [2]: Selects LINE 2.

[#] [0]: Selects LINE 1 and LINE 2.

- Memo messages will not be played.

[#][1][8]: Turns on the Answering System for LINE 1.

[#][2][8]: Turn on the Answering System for LINE 2.

[#][0][8]: Turns on the Answering System for LINE 1 and LINE 2.

- If the Answering System is turned on for one line and you also want to turn on the system for the other line, press [#][0][8].
- To turn the Answering System off for one line when both lines are turned on, turn the system on for the line which you want to leave on (see above).

Turning on the Answering System

Call the line for which you turned off the system, and wait for 15 rings.

- The unit will answer and the greeting will be played.
- The Answering System will be turned on. Hang up or enter the remote code for other options.
- When turning on the Answering System using a rotary or pulse service telephone, you cannot enter the remote code for other options.

Skipping the greeting


After calling your unit, press [*] during the greeting.

- The unit skips the rest of the greeting and you can start recording your message after the long beep.


Wall Mounting

This unit can be mounted on a wall phone plate.


- 1 Connect the AC adaptor.

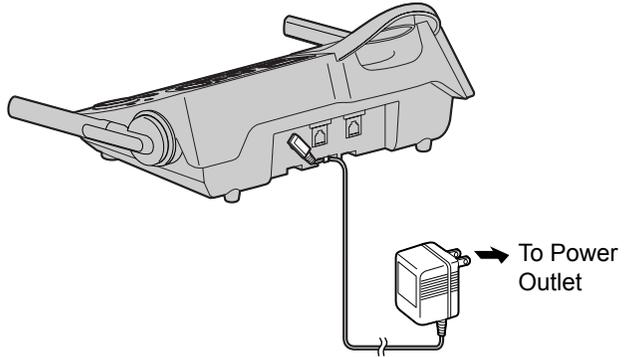

- 2 Tuck the telephone line cord inside the wall mounting adaptor (1).
Connect the telephone line cord (2).

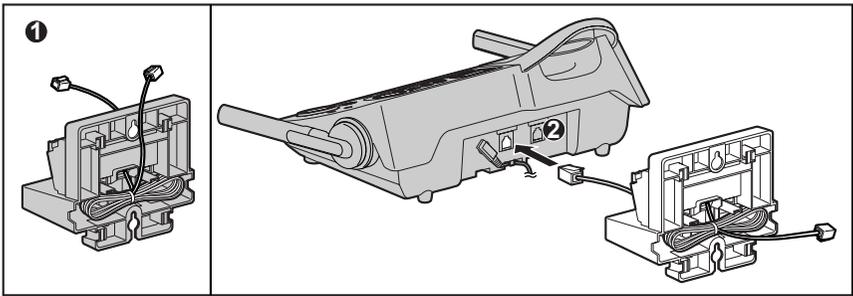


- 3 Insert the hooks on the wall mounting adaptor into the holes (A) and (B) on the base unit.

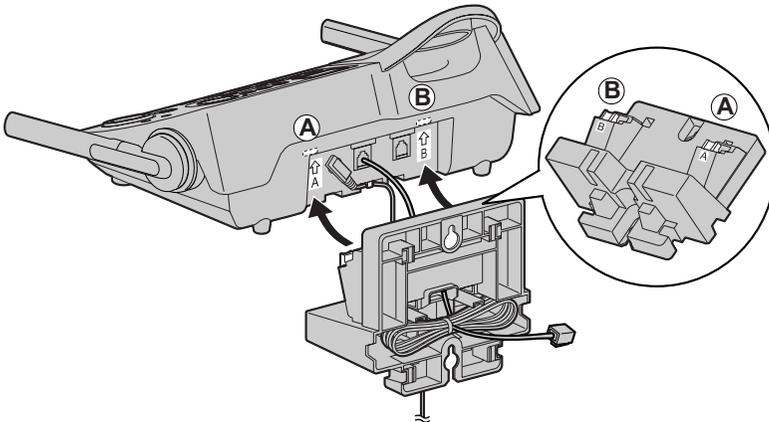


Wall Mounting

- 4** Adjust the adaptor to hold the base unit, then push it in the direction of the arrow until it clicks into place.

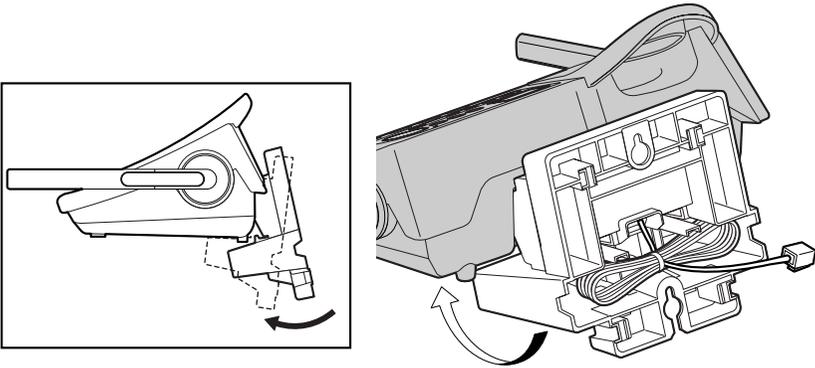

- 5** Connect the telephone line cord. Mount the unit, then slide it down.
• Raise the antennas.

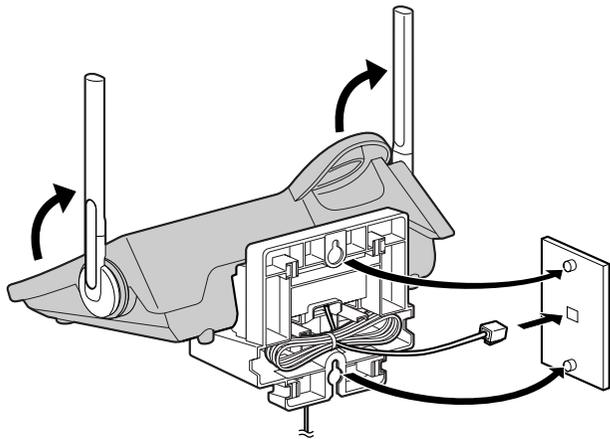


- 6 To charge the handset battery:**
Place the handset on the base unit.
• The unit beeps once and the CHARGE indicator lights.

Wall Mounting




To remove the wall mounting adaptor

While pushing down the RELEASE LEVERS (1), remove the adaptor (2).

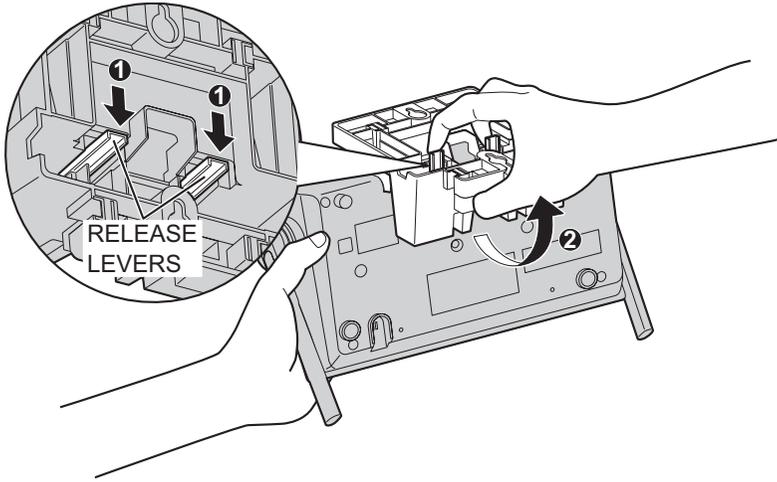

Charger unit (KX-TG6502 only)

The charger can be wall mounted. Connect the AC adaptor. Install screws using the wall template (see below). Mount the charger (1). Slide it down (2), then slide down to the right (3) until it is secured.

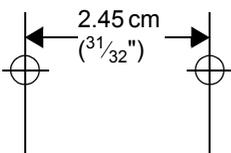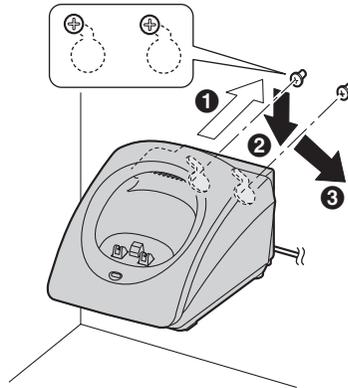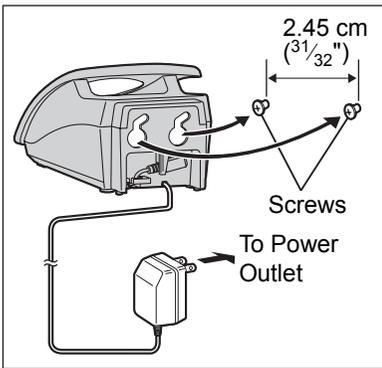


Wall Template for the Charger unit

Belt Clip


You can hang the handset on your belt or pocket using the included belt clip.

To attach the belt clip

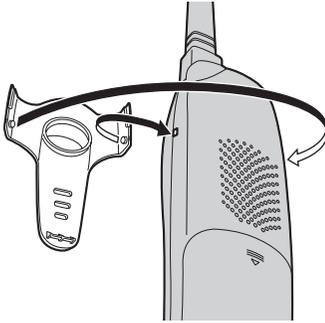

To remove the belt clip

While pressing the top of the clip (A), pull the right edge in the direction of the arrow (B).

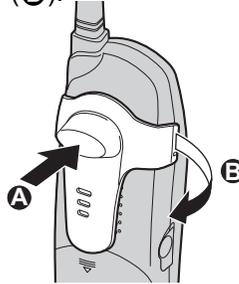


Optional Headset

Connecting an optional headset to the handset allows hands-free phone conversation. Please use only a Panasonic KX-TCA60, KX-TCA86, KX-TCA88, KX-TCA88HA, KX-TCA91, KX-TCA92, or KX-TCA98 headset. To order, call the accessories telephone number on page 2.

Connecting an optional headset

Open the headset jack cover, and insert the headset plug into the headset jack as shown below.

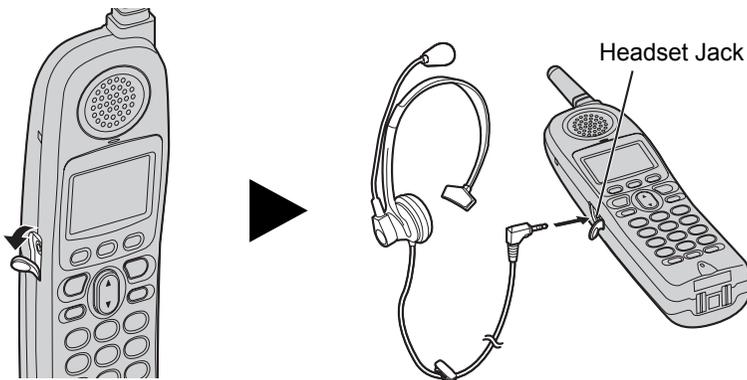

- Headset sold separately. Model shown here is KX-TCA88.

To switch to the speakerphone while using the headset:

Press [📞]. To return to the headset, press [📞].

Direct Commands

Handset

After pressing **[MENU]**, you can also program menu items directly by pressing (**[0]** to **[9]**, **[*]** and **[#]**) instead of using the soft keys.

Menu item		Command	Selection items	Page
Ringer volume (Handset)	Line 1	[1] [1] [1]	[1] : Low [2] : Medium [3] : High [0] : Off	p. 24
	Line 2	[1] [1] [2]		
Ringer tone (Handset)	Line 1	[1] [2] [1]	[1]–[4] : Tone pattern 1–4 [5]–[8] : Melody pattern 1–4	p. 26
	Line 2	[1] [2] [2]		
Incoming call tone (Handset)		[1] [3]	[1] : On [2] : 2 times [0] : Off	p. 68
Message play		[2]	–	p. 74
Date and time		[4]	Go to Step 3 on page 20.	–
Voice enhancer		[5]	[1] : On [0] : Off	p. 36
Copy phone book –Copy 1 item		[#] [1]	Go to Step 4 on page 52.	–
Copy phone book –Copy all items		[#] [2]	Go to Step 4 on page 53.	–
LCD contrast		[0] [1]	[1]–[6] : Level 1–6	p. 23
Key tone		[0] [2]	[1] : On [0] : Off	p. 70
Auto talk		[0] [3]	[1] : On [0] : Off	p. 23
Caller ID Number Auto Edit		[0] [4]	[1] : On [0] : Off	p. 45
Set dial mode		[0] [5] [1]	[1] : Pulse [2] : Tone	p. 21
Set flash time	Line 1	[0] [5] [2] [1]	[1] : 700 ms [2] : 600 ms [3] : 400 ms [4] : 300 ms [5] : 250 ms [6] : 110 ms [7] : 100 ms [8] : 90 ms	p. 67
	Line 2	[0] [5] [2] [2]		
Set line mode	Line 1	[0] [5] [3] [1]	[1] : A [2] : B	p. 22
	Line 2	[0] [5] [3] [2]		
Line selection (Handset)		[0] [5] [5]	[0] : Auto [1] : Line 1 [2] : Line 2	p. 69
Number of rings	Line 1	[0] [6] [1] [1]	[2]–[7] : 2–7 rings [0] : Toll saver	p. 31
	Line 2	[0] [6] [1] [2]		
Recording time	Line 1	[0] [6] [2] [1]	[1] : 1 minute [2] : 2 minute [3] : 3 minute [0] : Greeting only	p. 30
	Line 2	[0] [6] [2] [2]		
Remote code		[0] [6] [3]	Go to Step 5 on page 81.	–

Direct Commands

Menu item	Command	Selection items	Page
Recording mode	[0] [6] [4]	[1] : Standard recording (60 min) [2] : Enhanced recording (30 min)	p. 32
Change language	[0] [8]	[1] : English [2] : Spanish	p. 21
Room monitor (Handset)	[0] [9]	[1] : On [0] : Off	p. 63
Message alert	[0] [#]	[1] : On [0] : Off	p. 32
Ringer tone (Base unit)	Line 1	[0] [*] [1] [1]	p. 27
	Line 2	[0] [*] [1] [2]	
Incoming call tone (Base unit)	[0] [*] [2]	[1] : On [2] : 2 times [0] : Off	p. 68
Room monitor (Base unit)	[0] [*] [3]	[1] : On [0] : Off	p. 63
Line selection (Base unit)	[0] [*] [5]	[0] : Auto [1] : Line 1 [2] : Line 2	p. 70
Ringer volume (Base unit)	Line 1	[0] [*] [6] [1]	p. 25
	Line 2	[0] [*] [6] [2]	
Handset registration	[0] [0] [1]	Go to Step 5 on page 91.	–
Handset deregistration	[0] [0] [2]	[3] [3] [5]	p. 90
Phone book	[*]	To store an item, go to Step 2 on page 47. To search for items, go to Step 2 on page 49.	–

During programming:

When “**SAVE**” or “**OK**” is displayed, press the right soft key to **save the new settings**.

To exit programming, press **[OFF]**.

- If you press the direct command incorrectly, press **[OFF]**, then re-enter programming mode by pressing **[MENU]**.
- For function details, see the corresponding pages.

Canceling Registration/Re-registration

Canceling the Handset Registration **Handset**

If you no longer need to use the handset or if you want to use the handset with a different base unit of the same model, it is necessary to cancel the handset's registration from the current base unit.

Only one handset can be canceled at a time.

Make sure the handset and the base unit near each other and are not being used.

1 Press [MENU] .	
2 Scroll to "Initial setting" by pressing [▼] or [▲] , then press the soft key (SELECT).	Initial setting
3 Scroll to "Registration" by pressing [▼] or [▲] , then press the soft key (SELECT).	Registration
4 Scroll to "Deregistration" by pressing [▼] or [▲] , then press the soft key (SELECT).	Deregistration
5 Press [3][3][5] to delete the registration memory. <ul style="list-style-type: none">• If you enter a wrong code, re-enter [3][3][5].	Deregistration Enter code:335 :335
6 Press the soft key (OK). <ul style="list-style-type: none">• The registration memory will be erased on both the handset and the base unit.• If the handset beeps 3 times, you entered a wrong code. Enter "335", then press the soft key (OK).• To register the handset to another base unit of the same model, start from step 5 on page 91.	Ex. Extension number 2 Handset [2]  [-] Deregistered

- "[-]" is shown on the top right of the display.
- After canceling registration, the handset cannot be used. If you want to use it again, register the handset to the base unit by performing steps 5 and 6 on page 91.

Re-registering the Handset **Handset & Base Unit**

If you want to re-register the handset to the base unit or a different base unit of the same model, you need to register it to that base unit. The handset will be given a new extension number of that base unit. Only one handset can be registered at a time near the base unit.

Make sure the base unit and the other handsets are not being used. Have both the handset and base unit nearby during registration.

Canceling Registration/Re-registration

If you have canceled handset registration at a previous base unit (p. 90), start from step 5.

1 Handset: Press **[MENU]**.

2 Handset: Scroll to “Initial setting” by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Initial setting

3 Handset: Scroll to “Registration” by pressing **[▼]** or **[▲]**, then press the soft key **(SELECT)**.

Registration

4 Handset: Press the soft key **(SELECT)** at “HS registration”.

HS registration

5 Base unit:

Press and hold **[LOCATOR/INTERCOM/TRANSFER]** for 3 seconds.

- The CHARGE indicator flashes. After the CHARGE indicator starts flashing, the rest of the procedure must be completed within 1 minute.

6 Handset:

(1) Press the soft key **(OK)**.

(2) Wait until a long beep sounds and the display shows the new extension number (ex. extension number 2).

- Registration is complete.

Press LOCATOR
on base unit
for 3 sec.
Then press OK

 [2]

Handset [2]
Registered

- You can stop registration by pressing **[OFF]** on the handset and pressing **[LOCATOR/INTERCOM/TRANSFER]** on the base unit.
- If “Wrong handset Refer to manual” is displayed, the handset you tried to register is not for this base unit. This handset is for KX-TG5200/KX-TG5202/KX-TG5210/KX-TG5212/KX-TG5230/KX-TG5240/KX-TG5243/KX-FPG391 base unit. The accessory handset for this base unit is KX-TGA650. To order, see page 3.

If you have not canceled the handset’s registration at the previous base unit (p. 90), the handset number remains in that base unit’s memory. To erase the handset number from the previous base unit, perform the following steps:

(1) Press and hold **[LOCATOR/INTERCOM/TRANSFER]** for 3 seconds, and (2) Press and hold the handset number **[1]** (/) to **[4]** (/) that you do not want for 5 seconds. A long beep sounds, then the handset number is erased from the base unit memory.

If the Following Appear on Your Display...

The following will be displayed on the handset when the unit needs your attention.

Display message	Cause & Remedy
Recharge battery	<ul style="list-style-type: none"> • The battery needs to be charged. Recharge the battery (p. 17).
Charge for 6 HRS	<ul style="list-style-type: none"> • The battery has been discharged. The handset will not work. Fully charge the battery (p. 17).
No link to base. Move closer to base and try again.	<ul style="list-style-type: none"> • The handset has lost communication with the base unit. Walk closer to the base unit, and try again. • Confirm the base unit's AC adaptor is plugged in. • Raise the base unit antennas. • The handset's registration may have been canceled. Re-register the handset (p. 90, 91).
Please lift up and try again.	<ul style="list-style-type: none"> • A handset button was pressed while the handset was on the base unit or charger (for KX-TG6502 or accessory handset users, p. 3). Lift the handset and press the button again.
Busy	<ul style="list-style-type: none"> • The called base unit or handset is in use. • Other users are using the line(s). Wait until the line button light or the line status icon goes out. • Privacy mode is on for the call you tried to join (p. 65). • The handset you tried to send phone book items to is in use. • The handset you are calling is too far from the base unit.
Invalid	<ul style="list-style-type: none"> • The called handset has not been registered to the base unit. • You selected your own extension number.
Error!!	<ul style="list-style-type: none"> • When you tried to register or deregister the handset, the handset and base unit could not link for some reason, such as interference from electrical appliances. Move the handset and base unit away from any electrical appliances and try again. • If more than 1 handset is in use, you may not be able to register/deregister. Try again later. • Another handset tried to send phone book items to you but copying stopped. Have the other handset user re-send the items to you (p. 52, 53).
System is busy. Please try again later.	<ul style="list-style-type: none"> • If more than 1 other user is using the handset and/or base unit, such as conducting outside/intercom calls or listening to messages, you may not be able to use the handset. Try again later. • The Answering System is in use (answering a call or playing back messages). Try again later. • The handset has lost communication with the base unit. Walk closer to the base unit and try again.

If the Following Appear on Your Display...

Display message	Cause & Remedy
Phone book full	<ul style="list-style-type: none"> When you tried to store an item in the phone book, the phone book memory was full. Press [OFF] to exit programming mode. To erase other items from the phone book, see page 51.
---Incomplete--- Tom Jones 098-765-4321 Phone book full (The name/number is an example.)	<ul style="list-style-type: none"> When the displayed item was sent to the destination handset, the phone book memory was full and copying stopped. If you tried to send all of the items, the item displayed with "Incomplete" and items after it have not been copied to the destination handset. Press [OFF] to exit. To erase items from the destination handset phone book, see page 51. You can copy all of the items again or copy the items which have not been copied one by one (p. 52, 53).
---Incomplete--- Tom Jones 555-765-4321 (The name/number is an example.)	<ul style="list-style-type: none"> The destination handset is out of area. The destination handset user may have pressed [↶] or [↷].
Phone book No items stored	<ul style="list-style-type: none"> Your phone book is empty. No items cannot be copied to the destination unit.
Denied	<ul style="list-style-type: none"> The Room Monitor feature is turned off on the destination handset or base unit and cannot be monitored (p. 63). The called handset was on the base unit. The handset must be off the base unit to be monitored.
Invalid. Please register to the base unit	<ul style="list-style-type: none"> The handset you tried to call has not been registered to the base unit. Register the handset (p. 91, steps 5 and 6).
Error!! 4 handsets have already been registered.	<ul style="list-style-type: none"> 4 handsets have already been registered to the base unit. To cancel a handset's registration, see page 90. You may have registered one of your handsets to another base unit without deleting its registration to this base unit. Erase the handset's registration from the base unit. (1) Press and hold [LOCATOR/INTERCOM/TRANSFER] for 3 seconds, and (2) Press and hold the handset number [1] (/) to [4] (/) that you do not want for 5 seconds. A long beep sounds, then the handset number is erased from the base unit memory.

If the Following Appear on Your Display...

Display message	Cause & Remedy
Wrong handset Refer to manual	<ul style="list-style-type: none"> The accessory handset for this base unit is KX-TGA650. To order, see page 3. Your handset is not for this base unit. Your handset is for KX-TG5200/KX-TG5202/KX-TG5210/KX-TG5212/KX-TG5230/KX-TG5240/KX-TG5243/KX-FPG391 base unit.

Troubleshooting

If the handset display shows error messages, see “If the Following Appear on Your Display...” (p. 92–94) for the Cause & Remedy.

Telephone System

Problem	Cause & Remedy
“No link to base. Move closer to base and try again.” is displayed and an alarm tone sounds.	<ul style="list-style-type: none"> The handset has lost communication with the base unit. Walk closer to the base unit, and try again. Confirm the base unit’s AC adaptor is plugged in. Raise the base unit antennas. The handset’s registration may have been canceled. Re-register the handset (p. 90, 91).
Static, sound cuts in/out, fades. Interference from other electrical units.	<ul style="list-style-type: none"> Move the handset and base unit away from other electrical appliances (p. 6). Walk closer to the base unit. Raise the base unit antennas. Turn on the Clarity Booster feature (p. 36). If the unit is connected to a telephone line with DSL service, you may hear noise from the receiver or speaker during conversations. We recommend connecting a noise filter (contact your DSL service provider) to the telephone line between the base unit and the telephone line jack.
The base unit/handset does not ring.	<ul style="list-style-type: none"> The ringer volume is turned off. Set to high, medium, or low (p. 24, 25). If more than 1 other user is using the handset and/or base unit, the handset/base unit may not ring. Users will hear incoming call tones (p. 68) during a call or in room monitor mode.
The handset display is blank.	<ul style="list-style-type: none"> If the handset display is blank, fully charge the battery (p. 16).

Troubleshooting

Problem	Cause & Remedy
You cannot program any function items.	<ul style="list-style-type: none">• Programming is not possible while the handset or base unit is being used.• Do not pause for over 60 seconds while programming.• Walk closer to the base unit.• While another user is listening to messages or the Answering System is handling a call, you cannot program. Try again later.
While programming or searching, the handset or base unit starts to ring and the program/search stops.	<ul style="list-style-type: none">• A call is coming in. To answer the call, press [↶], [↷], or the called line soft key (LINE1) or (LINE2) on the handset, or press [SP-PHONE] or the called line button on the base unit. Start again from the beginning after hanging up.
You cannot make an intercom/ outside call.	<ul style="list-style-type: none">• If more than 1 other user is using the handset and/or base unit, you may not be able to make a call. Try again later.• Your handset is in remote operation mode (p. 74). Exit by pressing [OFF].• The handset you called is too far from the base unit.
You cannot redial.	<ul style="list-style-type: none">• If the last number dialed was more than 48 digits long, the number will not be redialed correctly.• The [REDIAL/PAUSE] button functions as either redial or pause. It will redial the last number dialed if pressed before dialing any digits (p. 34, 38). If another number has been dialed first, it will operate as a pause button (p. 65).
You cannot make long distance calls.	<ul style="list-style-type: none">• Please make sure you have long distance service.

Troubleshooting

Problem	Cause & Remedy
<p>The handset does not display the caller's name and/or phone number.</p>	<ul style="list-style-type: none"> • You need to subscribe to Caller ID. • Other telephone equipment may be interfering with your phone. Disconnect it and try again. • Other electrical appliances connected to the same outlet may be interfering with Caller ID. • Telephone line noise may be affecting Caller ID. • The caller requested not to send his/her Caller ID information (p. 41). • If a call is being transferred to you, the Caller ID information will not be displayed. • If a (separate) Caller ID box is connected between the base unit and the telephone wall jack, disconnect the Caller ID box or plug the unit directly into the wall jack. • If the unit is connected to a telephone line with DSL service, the unit may not display caller's name and/or phone number properly. We recommend connecting a noise filter (contact your DSL service provider) to the telephone line between the base unit and the telephone line jack.
<p>The handset cannot automatically edit the Caller List/incoming phone numbers.</p>	<ul style="list-style-type: none"> • The Caller ID Number Auto Edit feature is turned off. Turn it on (p. 45) and try again. • You need to press [↶], [↷], or a line soft key (LINE1) or (LINE2) after editing the number.
<p>The handset display exits the Caller List or phone book.</p>	<ul style="list-style-type: none"> • Do not pause for over 60 seconds while searching.
<p>The Ringer/Message Alert indicator flashes slowly when the handset is not ringing and in use.</p>	<ul style="list-style-type: none"> • The Message Alert is turned on and new messages have been recorded. Turn the Message Alert off (p. 32) or listen to the new messages (p. 73, 74, 80).
<p>You cannot have a conversation using the headset.</p>	<ul style="list-style-type: none"> • Make sure the optional headset is connected properly (p. 87). • If "SP-phone" is displayed on the handset, press [↶] to switch to the headset.

Answering System

Problem	Cause & Remedy
The Answering System is on, but incoming messages are not recorded.	<ul style="list-style-type: none"> • The recording time is set to "Greeting only". Select "1 minute", "2 minutes" or "3 minutes" (p. 30). • Memory is full. Erase unnecessary messages (p. 77). • The Answering System is not turned on for the line you wish to record messages from. Select the desired line or both lines by pressing [LINE SELECT] repeatedly, then turn the Answering System on again (p. 71).
" FULL " flashes and the ANSWER ON indicator flashes rapidly. No new messages are recorded.	<ul style="list-style-type: none"> • Memory is full. Erase unnecessary messages (p. 77).
You cannot operate the Answering System from the base unit or the handset.	<ul style="list-style-type: none"> • If more than 1 other user is using the handset and/or base unit, you may not be able to operate the Answering System. Try again later. • If another user is listening to messages or the Answering System is handling a call, you cannot operate the Answering System. Try again later.
You cannot operate the Answering System from a touch tone phone.	<ul style="list-style-type: none"> • Make sure you entered the correct remote code (p. 81). • The Answering System may not respond if the tones are too short to activate the unit. Press each button firmly. • The Answering System is off. Turn it on (p. 71).
When you play back messages or turn on the Answering System, the base unit and handset announce the wrong day and time.	<ul style="list-style-type: none"> • The date and time may be set incorrectly. Set the date and time again (p. 20).
Caller ID information is not displayed during message playback (p. 76).	<ul style="list-style-type: none"> • Caller ID information will not be displayed <ul style="list-style-type: none"> — if a message is recorded by using [MEMO] (p. 78), or — if a call is transferred to the Answering System and the caller leaves a message (p. 79).
Although you tried to erase all messages, all messages are not erased.	<ul style="list-style-type: none"> • If you pressed a button to start another operation before you hear "No messages", erasing is stopped. Erase messages again (p. 77, 78).
The NEW MESSAGE indicator still flashes even if you have listened to all new messages.	<ul style="list-style-type: none"> • The other line has new messages. Select that line by pressing [LINE SELECT], then play back the new messages (p. 73). • If you selected lines to play back messages, memo messages will not be played. Play back messages without selecting lines first (p. 73).

Troubleshooting

Problem	Cause & Remedy
An incoming message recorded for a line is not played after pressing [MESSAGE].	<ul style="list-style-type: none"> Select the line for that message by pressing [LINE SELECT], then press [MESSAGE] (p. 73).
Memo messages are not played after pressing [MESSAGE].	<ul style="list-style-type: none"> You may have pressed [LINE SELECT] before pressing [MESSAGE]. Press [MESSAGE] again without pressing [LINE SELECT] (p. 73).

General

Problem	Cause & Remedy
The handset/base unit does not work.	<ul style="list-style-type: none"> Check the settings (p. 12–17). Check whether the dialing mode setting is correct (p. 21). Fully charge the battery (p. 16). Clean the charge contacts and charge again (p. 17). Check battery installation (p. 16). Unplug the base unit's AC adaptor to reset it. Plug in, and try again. The handset has not been registered to the base unit. Register the handset (p. 91, steps 5 and 6). Re-install the battery (p. 16) and fully charge it.
"Recharge battery" is displayed, "■" flashes, or the handset beeps intermittently.	<ul style="list-style-type: none"> Fully charge the battery (p. 16, 17).
"Charge for 6 HRS" and "■" are displayed and the handset does not work.	<ul style="list-style-type: none"> The battery has been discharged. Fully charge the battery (p. 16, 17).
You charged the battery fully, but "Recharge battery" is still displayed and/or "■" continues to flash, or "Charge for 6 HRS" and "■" are displayed.	<ul style="list-style-type: none"> Clean the charge contacts and charge again (p. 17). The battery may need to be replaced. If you install a new battery, fully charge it (p. 16, 17).
The CHARGE indicator does not go out after the battery has been charged.	<ul style="list-style-type: none"> This is normal.
If you cannot solve your problem	<ul style="list-style-type: none"> Visit our website: http://www.panasonic.com/support Contact us via the web at: http://www.panasonic.com/contactinfo Call our customer call center at: 1-800-211-PANA(7262)

Important Safety Instructions

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from AC outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near water, for example, near a bathtub, washbowl, kitchen sink, or the like.
5. Place this unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
10. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
11. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized servicenter when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
12. Unplug this unit from the wall outlet and refer servicing to an authorized servicenter when the following conditions occur:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized servicenter.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
14. Do not use this unit to report a gas leak, when in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

Important Safety Instructions

CAUTION:

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) specified.
2. Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns.
5. Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

- The AC adaptor is used as the main disconnect device, ensure that the AC outlet is located/installed near the unit and is easily accessible.

FCC and Other Information

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:ACJ-----.

If requested, this number must be provided to the telephone company.

Registration No. (found on the bottom of the unit)
Ringer Equivalence No. (REN).....0.2B

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).

FCC and Other Information

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact a Factory Servicenter or other Authorized Servicer. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

WHEN PROGRAMMING EMERGENCY NUMBERS AND(OR) MAKING TEST CALLS TO EMERGENCY NUMBERS:

- 1) Remain on the line and briefly explain to the dispatcher the reason for the call.
- 2) Perform such activities in the off-peak hours, such as early morning or late evenings.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this phone.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC and Other Information

Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the cordless telephone further away from the TV or VCR. This will often reduce, or eliminate, interference.

Operating near 5.8 GHz electrical appliances may cause interference. Move away from the electrical appliances.

FCC RF Exposure Warning:

This product complies with FCC radiation exposure limits set forth for an uncontrolled environment. To comply with FCC RF exposure requirements the base unit must be installed and operated with its antenna located 20 cm or more between antenna and all person's body (excluding extremities of hands, wrist and feet). The handset unit may be carried and operated with only the specific provided belt-clip. Other non-tested belt-clips or similar body-worn accessories may not comply and must be avoided. The base and handset units must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment is hearing aid compatible as defined by the FCC in 47 CFR Section 68.316.

When you hold the phone to your ear, noise might be heard in your Hearing Aid. Some Hearing Aids are not adequately shielded from external RF (radio frequency) energy. If noise occurs, use an optional headset accessory or the speakerphone option (if applicable) when using this phone. Consult your audiologist or Hearing Aid manufacturer about the availability of Hearing Aids which provide adequate shielding to RF energy commonly emitted by digital devices.

A TIA/EIA-IS-968 compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack that is also TIA/EIA-IS-968 compliant.

- **Environment** — do not place the unit in a room where the temperature is less than 5°C (41°F) or greater than 40°C (104°F). Allow 10 cm (4") clearance around the unit for proper ventilation. Avoid excessive smoke, dust, mechanical vibration, shock, or direct sunlight.
- **Medical** — consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The unit operates in the frequency range of 5760MHz to 5840MHz, and the power output level can range from 0.25 watts to 0.5 watts.) Do not use the unit in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF (radio frequency) energy.
- **Routine care** — wipe the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder. When you leave the unit unused for a long period of time, unplug the AC adaptor from the outlet.
- **If there is any trouble** — disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your unit repaired by one of the authorized Panasonic Factory Service Centers. If the known working phone does not operate properly, consult your telephone company.

Index

A

- Accessories 2
- Accessory handset 3
- Answering calls, base unit 39
- Answering calls, handset 39
- Answering System 71
- Auto talk 23, 39, 56

B

- Backlit LCD 35
- Base unit location 6
- Battery charge 6, 16
- *Battery information* 17
- Battery replacement 16, 17
- Battery strength 16
- Belt clip 87
- *Booster* 36

C

- Call share 62
- Call Waiting Caller ID display 66
- Call waiting tone 66
- *Caller ID number auto edit* 44, 45
- *Call monitoring* 72
- Caller ID service 41
- Caller List, editing 44
- Caller List, erasing 46
- Caller List, storing 46
- Caller List, viewing 42
- Calling back from the Caller List 43
- *Chain dial* 50
- CID (Caller ID) 41
- *Clarity booster* 36
- CONF (Conference) 61
- Conference calls 61
- *Copy phone book* 52

D

- *Date and time* 20
- Deregistration 90
- Dialing mode 21
- Direct commands 88, 89
- Displays 10
- Display language 21

E

- Erasing messages 77
- Erasing all messages 77
- Error messages 92
- Extension number 55, 90, 91

F

- FCC and other information 100
- FLASH button 67
- Flash time 67
- *Function menu*,
- *Direct commands* 88, 89
- Function menu, selection 18
- Function menu, table 19

G

- *Greeting message* 28

H

- Headset, optional 87
- Hold 35, 38

I

- Incoming call tone 68
- Installation, AC adaptor 12
- Installation, battery 16
- Installation, telephone
- line cord 13, 14
- Intercom call 55

K

- Key tone 70

L

- LCD contrast 23
- Lighted handset keypad 35
- Line mode 22
- LINE SELECT button
- 25, 28, 71, 72, 73, 77
- Line selection 69
- Listening to messages 73, 74, 80
- Location of controls 7, 8

Index

M

- Mailbox, transferring a call 79
- Making calls, base unit 37
- Making calls, handset 33
- Memo message 78
- Message alert 32, 73
- Message storage 29
- Microphone, base unit . 28, 37, 55, 57
- Microphone, handset 33
- Monitoring incoming calls 72
- Mute 65

N

- Navigator key 9
- Noise 6
- Number of rings 31

P

- Paging 55
- PAUSE 65
- Phone book 47
- Phone book, copying 52, 53
- Phone book, dialing 48, 50
- Phone book, editing 51
- Phone book, erasing 51
- Phone book, names 48
- Phone book, storing 47
- Power failure 12, 20, 29
- Privacy feature 65
- Pulse service 66

R

- Recording mode 32
- Recording time 30
- Redial 34, 38
- Redial list 35
- Registration 90, 91
- Registration, canceling 90
- Remote code 81
- Remote operation, handset 74
- Remote operation, touch tone phone 80
- Ringer off 24, 25, 39
- Ringer tone 26, 27
- Ringer volume 24, 25

- Room monitor 63
- Rotary service, tone dialing 66

S

- Safety instructions 99
- Shipping product for service Back cover
- Soft keys 9
- Speed dialer 54
- Specifications 107
- SP-phone, base unit 37
- SP-phone, handset 33

T

- Toll saver 31
- Transferring a call 58, 79
- Troubleshooting, Answering System 97
- Troubleshooting, general 98
- Troubleshooting, Telephone System 94
- TTY 2, 106, Back Cover

V

- VE (Voice Enhancer) 36
- Voice enhancer technology 36
- Voice menu 75, 82
- Voice paging 57
- Volume control, base unit . 29, 37, 76
- Volume control, handset 34, 76

W

- Wall mounting 84
- Warranty 105

• “–” indicates important information and frequently used features.

PANASONIC CONSUMER
ELECTRONICS COMPANY, DIVISION
OF MATSUSHITA ELECTRIC
CORPORATION OF AMERICA
One Panasonic Way
Secaucus, New Jersey 07094

PANASONIC SALES COMPANY,
DIVISION OF MATSUSHITA
ELECTRIC OF PUERTO RICO, INC.,
Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

Panasonic Telephone Products Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

Parts	Labor
One (1) Year	One (1) Year

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" Limited Warranty period, there will be no charge for parts. You must mail-in your product during the Limited Warranty period. This Limited Warranty excludes both parts and labor for batteries, antennas, and cosmetic parts (cabinet). This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers products purchased as new.

Mail-In Service

For assistance in the continental U.S.A. in obtaining repairs please ship the product to:

**Panasonic Services Company Customer Servicenter
Suite B 4900 George McVay Drive McAllen, TX 78503**

For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

For Limited Warranty service for headsets if a headset is included with this product please call Panasonic Call Center at 1-800-211-PANA (7262).

When shipping the unit carefully pack, include all accessories, and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached.

IF REPAIR IS NEEDED DURING THE LIMITED WARRANTY PERIOD THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Limited Warranty Limits And Exclusions

This Limited Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY. (As examples, this excludes damages for lost time, lost calls or messages, cost of having someone remove or re-install an installed unit if applicable, travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This Limited Warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the Limited Warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest Dealer or Servicenter; purchase Parts and Accessories; or make Customer Service and Literature requests by visiting our Web Site at:

<http://www.panasonic.com/support>

or, contact us via the web at:

<http://www.panasonic.com/contactinfo>

You may also contact us directly at: 1-800-211-PANA (7262),
Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

For hearing or speech impaired TTY users, TTY : 1-877-833-8855

Accessory Purchases

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

<http://www.pasc.panasonic.com>

or, send your request by E-mail to:

npcparts@panasonic.com

You may also contact us directly at:

1-800-332-5368 (Phone) 1-800-237-9080 (Fax Only)

(Monday - Friday 9 am to 8 pm, EST.)

Panasonic Services Company

20421 84th Avenue South, Kent, WA 98032

(We Accept Visa, MasterCard, Discover Card, American Express,
and Personal Checks)

For hearing or speech impaired TTY users, TTY : 1-866-605-1277

Service in Puerto Rico

***Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company
Factory Servicenter:***

***Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park,
Carolina, Puerto Rico 00985***

Phone (787)750-4300, Fax (787)768-2910

Specifications

■ Handset

Power Supply:	Ni-MH battery (3.6 V, 830 mAh)
Frequency:	5.76 GHz – 5.84 GHz
Dimensions (H x W x D):	Approx. 220 mm x 53 mm x 37 mm (8 ²¹ / ₃₂ " x 2 ³ / ₃₂ " x 1 ¹⁵ / ₃₂ ")
Mass (Weight):	Approx. 210 g (0.46 lb.)
Security Codes:	1,000,000

■ Base Unit

Power Supply:	AC adaptor (120 V AC, 60 Hz)
Power Consumption:	Standby: Approx. 2.7 W Maximum: Approx. 6.5 W
Frequency:	5.76 GHz – 5.84 GHz
Dimensions (H x W x D):	Approx. 107 mm x 251 mm x 135 mm (4 ⁷ / ₃₂ " x 9 ⁷ / ₈ " x 5 ⁵ / ₁₆ ")
Mass (Weight):	Approx. 520 g (1.15 lb.)

■ Charger (KX-TG6502 only)

Power Supply:	AC adaptor (120 V AC, 60 Hz)
Power Consumption:	Standby: Approx. 0.8 W Maximum: Approx. 4.0 W
Dimensions (H x W x D):	Approx. 69 mm x 74 mm x 100 mm (2 ²³ / ₃₂ " x 2 ²⁹ / ₃₂ " x 3 ¹⁵ / ₁₆ ")
Mass (Weight):	Approx. 120 g (0.26 lb.)

■ **Dialing Mode:** Tone (DTMF)/Pulse

■ **Operating Environment:** 5 °C – 40 °C (41 °F – 104 °F)

Specifications are subject to change without notice.

Energy Star:

As an ENERGY STAR® Participant, Panasonic has determined that this product meets the ENERGY STAR guidelines for energy efficiency. ENERGY STAR is a U.S. registered mark.



For product service

- Visit our website: <http://www.panasonic.com/support>
- Contact us via the web at: <http://www.panasonic.com/contactinfo>
- Call us at: 1-800-211-PANA(7262)

When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.

Symptom

-
- Send the unit to an authorized servicer, prepaid and adequately insured.
 - Do not send your unit to the Panasonic Consumer Electronics Company listed below or to executive or regional sales offices. These locations do not repair consumer products.

For your future reference

Serial No. _____

Date of purchase _____

(found on the bottom of the unit)

Name and address of dealer _____

- This cordless telephone is designed for use in the United States of America. Sale or use of this product in other countries may violate local laws.
- Ce téléphone sans fil est conçu pour être utilisé aux États-Unis d'Amérique. La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale.
- Este teléfono inalámbrico fue elaborado para uso en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir violación de la legislación local.
- このコードレス電話機は、日本国外での使用を目的として設計されており、日本国内での使用は法律違反となります。従って、当社では日本国内においては原則として修理などのサービスは致しかねます。

If you need assistance with setup or operation, please call 1-800-211-PANA(7262)

For hearing or speech impaired TTY users, TTY : 1-877-833-8855

**Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America**
One Panasonic Way, Secaucus, New Jersey 07094

**Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.**
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park
Carolina, Puerto Rico 00985