

AS-702B Normal and Precision Tracking modes

The AS-702B has a precision tracking mode for instances where the voltage shift is very tight between on hold and off hook; you need to use it if the AS-702B learns fine and places the call on hold, but it won't stop the hold music when you pick the phone up.

How to tell if you are in precision tracking mode

Unplug the AS-702B from POWER. After about 1 minute, plug the POWER back in **WHILE YOU ARE WATCHING THE LIGHTS** on the AS-702B.

In NORMAL mode, the lights will flash GREEN then OFF for 3 times.

In PRECISION TRACKING mode, the lights will flash GREEN then RED for 3 times.

Changing between modes

The following process lets you change back and forth between NORMAL and PRECISION TRACKING modes; it is a toggle, do it once to enter PRECISION TRACKING mode, then again to go back to NORMAL mode.

Push and HOLD down the LEARN buttons on the AS-702B (it is best if you use the eraser end of pencils for this); you can do them at the same time or one at a time. After about 10 seconds, the lights on the AS-702B will turn GREENISH-ORANGE, keep holding the button down. After about 20 seconds, the lights will turn SOLID GREEN; now you can release the buttons and the lights will flash: GREEN/OFF 3 times for NORMAL mode or GREEN/RED 3 times for PRECISION TRACKING mode.

After changing between modes, you need to clear the AS-702B memory and re-learn your phones. To clear the memory, push and HOLD down the LEARN buttons on the AS-702B (it is best if you use the eraser end of pencils for this); you can do them at the same time or one at a time. After about 10 seconds, the lights on the AS-702B will turn GREENISH-ORANGE; now you can release the buttons and re-learn the phones normally.